SH7285/SH7286 USB Function Module

USB to Serial Conversion Application Note

Preface

This document describes how to implement USB to serial conversion system as an application example for the SH7285 and SH7286 MCU's USB function module. This document and the sample program described are examples of the USB function module, and are therefore not guaranteed by Renesas.

Target Devices

SH7285 and SH7286 MCUs

1. Introduction 2
1.1 Specifications 2
1.2 Functions 2
1.3 Applicable Conditions 2

2. Applications 3
2.1 Features 3
2.2 USB Communication via the USB Function Module 3
2.3 Detecting a Connection to the USB Host 4
2.4 Control Transfer 6
2.4.1 Setup Stage 8
2.4.2 Data Stage 10
2.4.3 Status Stage 14
2.5 Bulk Transfer 16
2.5.1 Bulk OUT Transfer 17
2.5.2 Bulk IN Transfer 19

3. USB to Serial Conversion System Using the USB Function Module 21
3.1 Overview 21
3.2 Operation Flowchart 25
3.3 Serial Communication 27
3.3.1 Serial OUT Communication 27
3.3.2 Serial IN Communication 28
3.4 Setting Environment 29
3.4.1 USB Host Computer Setting 29
3.4.2 PC-PC Communication Settings 32

4. References 33

1. Introduction

1.1 Specifications

This document describes how to use the SH7285/SH7286 USB function module, and how to implement a USB to serial conversion system as an application example of the USB function module.

1.2 Functions

- USB function module
- Serial communication interface with FIFO (SCIF)

1.3 Applicable Conditions

- MCUs : SH7285 and SH7286
- Operating frequency : 100 MHz internal clock
  50 MHz bus clock
  50 MHz peripheral clock
- C compiler : Renesas Technology
  SuperH RISC engine Family C/C++ Compiler Package Ver.9.01 Release 01
- Compile options : -cpu=sh2a -include="$(WORKSPDIR)¥inc"
  -object="$(CONFIGDIR)¥$(FILELEAF).obj" -debug -gbr=auto
  -chgincpath-errorpath -global_volatile=0 -opt_range=all
  -infinite_loop=0-del_vacant_loop=0 -struct_alloc=1 –nologo

2. Applications

This sample program uses the USB function module to execute the control IN, control OUT, bulk IN, and bulk OUT transfers. The sample program also converts USB to serial signals and vice versa.

2.1 Features

The USB function module has an embedded USB 1.1 compliant USB Device Controller (UDC) to automatically process USB protocols. The function module has four mounted endpoints for each transfer mode, and transfers data in the control transfer, bulk OUT transfer, bulk IN transfer, and interrupt transfer to the USB host.

The following lists the USB function module features available in the SH7285 and SH7286 MCUs:

- Embedded USB 1.1 compliant UDC
- USB protocol processed automatically
- USB standard request to endpoint 0 processed automatically (some requests need to be processed by the firmware)
- Data rate: Full-speed
- Interrupt request: Generates various interrupt signals required for USB communication
- Clocks: External clock (48 MHz)
  Internal clock (enabled only when EXTAL 12 MHz is selected)
- Low Power Mode
  When a USB cable is not connected, less power is consumed by stopping the UDC internal clock
- Endpoint configuration

Table 2.1 Endpoint Configurations

Endpoint	Name	Transfer Mode	Maximum Packet Size	FIFO Buffer Capacity	DMA Transfer
Endpoint 0	EP0s	Setup	8 bytes	8 bytes	N/A
	EP0i	Control IN	8 bytes	8 bytes	N/A
	EP0o	Control OUT	8 bytes	8 bytes	N/A
Endpoint 1	EP1	Bulk OUT	64 bytes	64 x 2 (128 bytes)	Available
Endpoint 2	EP2	Bulk IN	64 bytes	64 x 2 (128 bytes)	Available
Endpoint 3	EP3	Interrupt	8 bytes	8 bytes	N/A

2.2 USB Communication via the USB Function Module

As an example of using the USB function module for USB communication, the sample program implements the USB communication features listed in the table below.

Table 2.2 USB Communication Functions

USB Communication Features	Description
Detect a connection to the USB host	The port pulls up the D+ pin to detect a connection.
Control transfer	Decodes requests, processes the Data stage and Status stage of the USB request transmitted from the USB host in the control transfer.
Bulk IN/OUT transfers	Executes bulk IN/OUT transfers.

2.3 Detecting a Connection to the USB Host

A connection to the USB host is detected using the cable connect interrupt (the BRST bit in the USBIFR0 register). The cable connect interrupt occurs when a USB device cable is connected to the USB host.

After the user configures the MCU, the sample program pulls up the USB data bus D+ pin using the general output port. The USB host recognizes that a USB device is connected by the pull-up. Figure 2.1 shows an operation flowchart of the sample program, and Figure 2.2 shows the USB Function Module Peripheral Block Circuit.

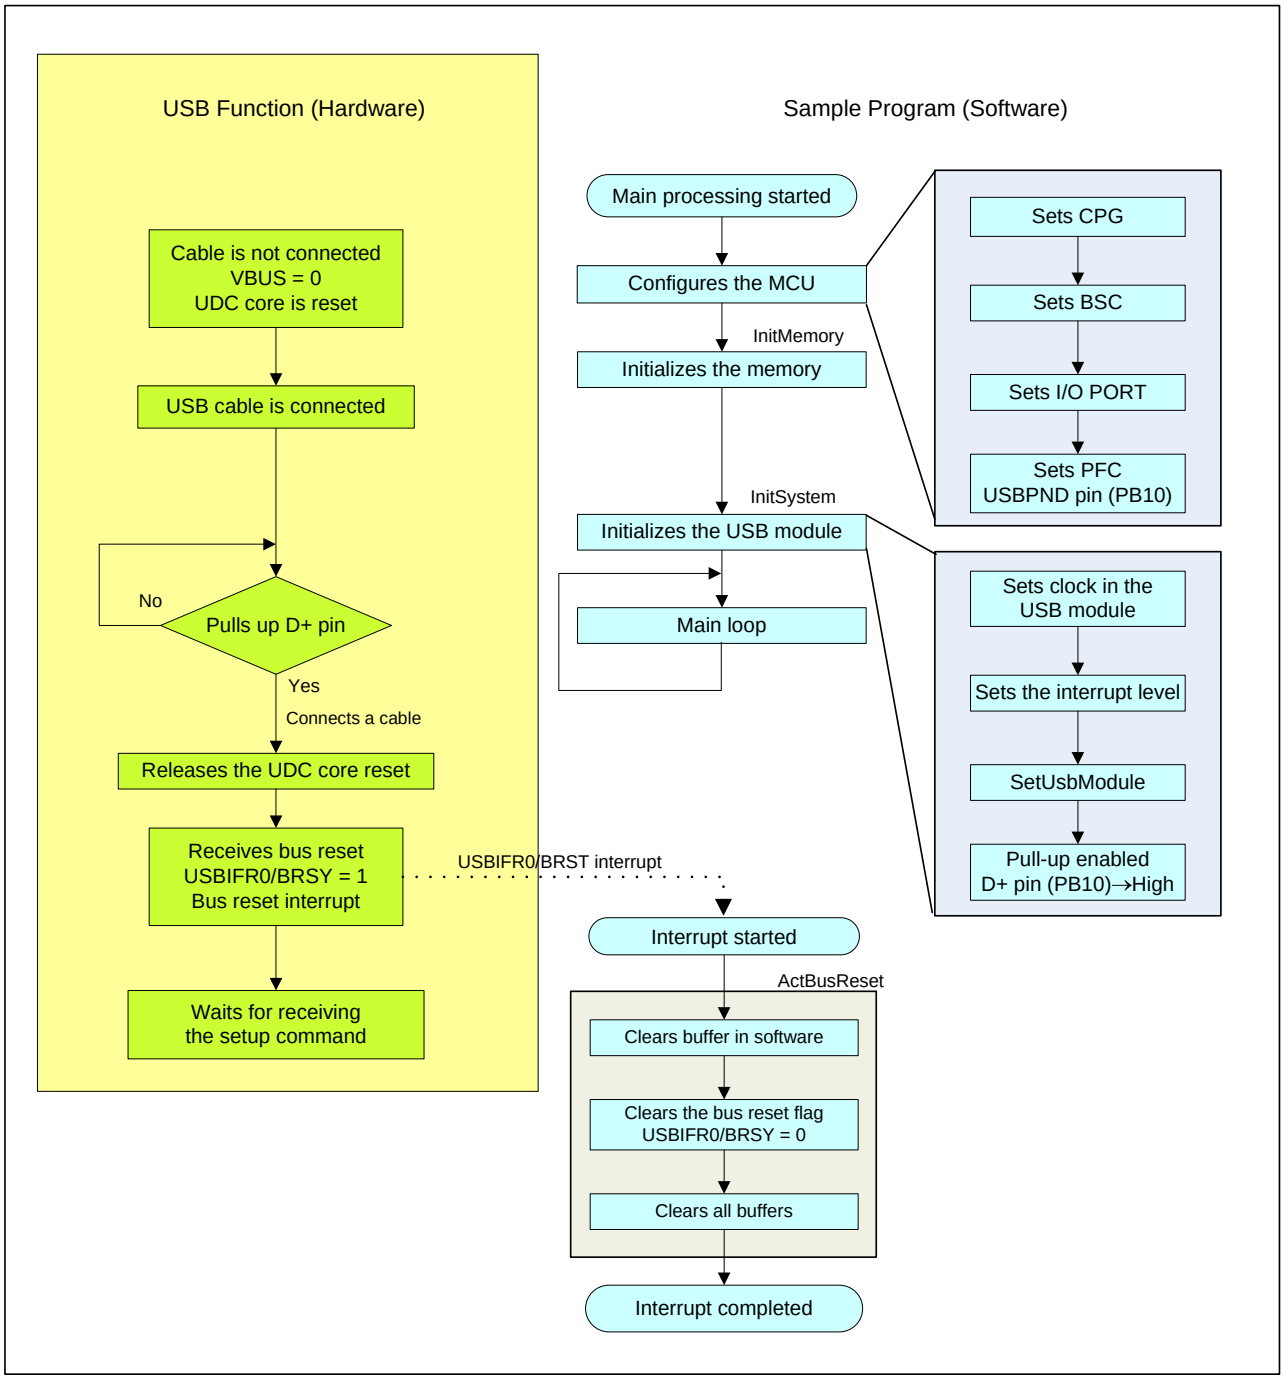

Figure 2.1 Detecting a Connection to the USB Host

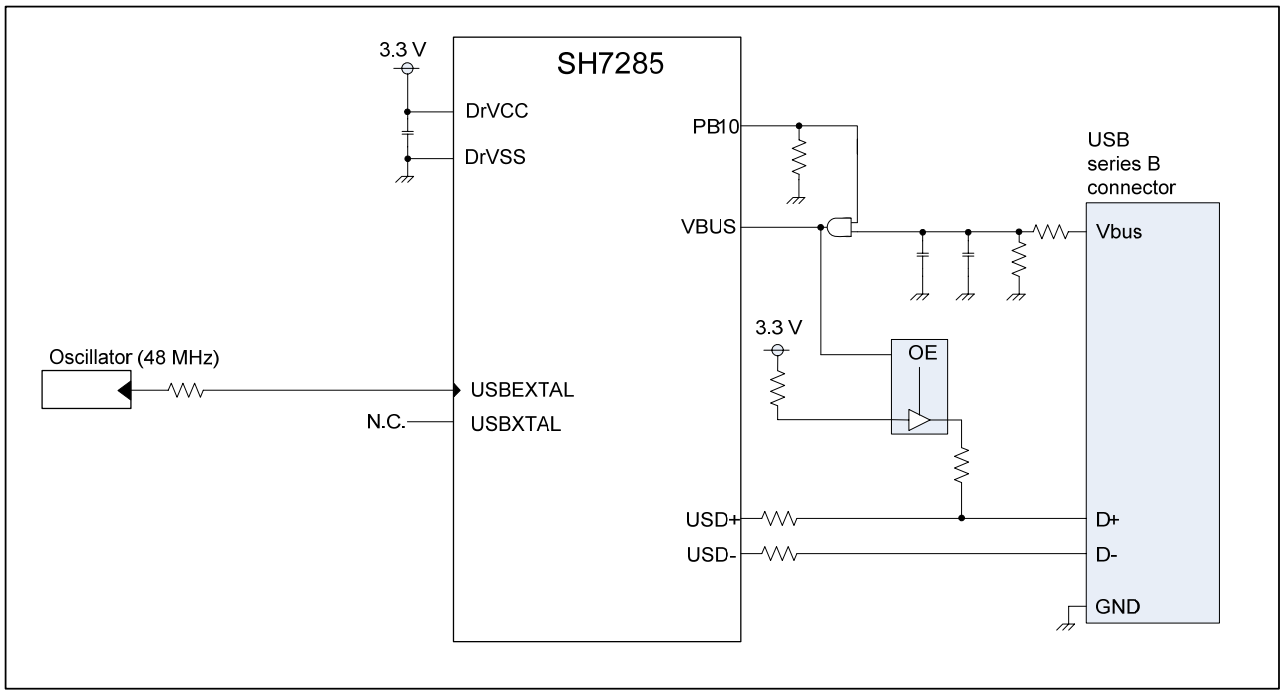

Figure 2.2 USB Function Module Peripheral Block Circuit

2.4 Control Transfer

A control transfer is a USB transfer that uses the endpoint 0 default pipe and must be supported by all USB devices. The USB host issues a USB standard request to the USB device and configures the device. A control transfer can be used to issue a class- or vendor-specific request.

A control transfer is composed of a Setup stage, Data stage (not in all cases), and Status stage. The Data stage consists of multiple bus transactions. Control transfers are supported via bi-directional communication flow, according to the data direction of the Data stage. A control OUT transfer is the data flow from the USB host to the USB device during the Data stage. A control IN transfer is the data flow from the USB device to the USB host during the Data stage. The Data stage is completed when the USB host transmits an inverted token of the data direction. The Status stage is the stage that transmits the inverted token to the USB host. Figure 2.3 shows Data Direction During the Data Stage and Figure 2.4 shows each Stage Configuration During Control Transfer.

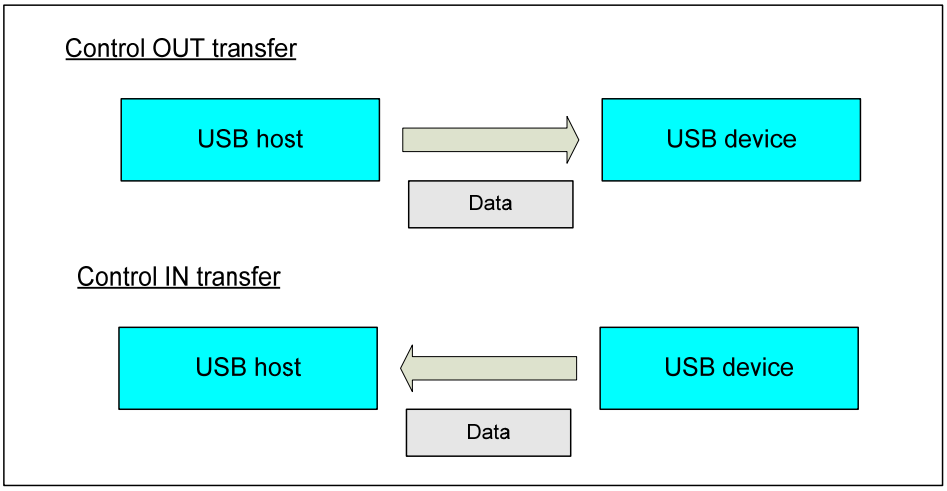

Figure 2.3 Data Direction During the Data Stage

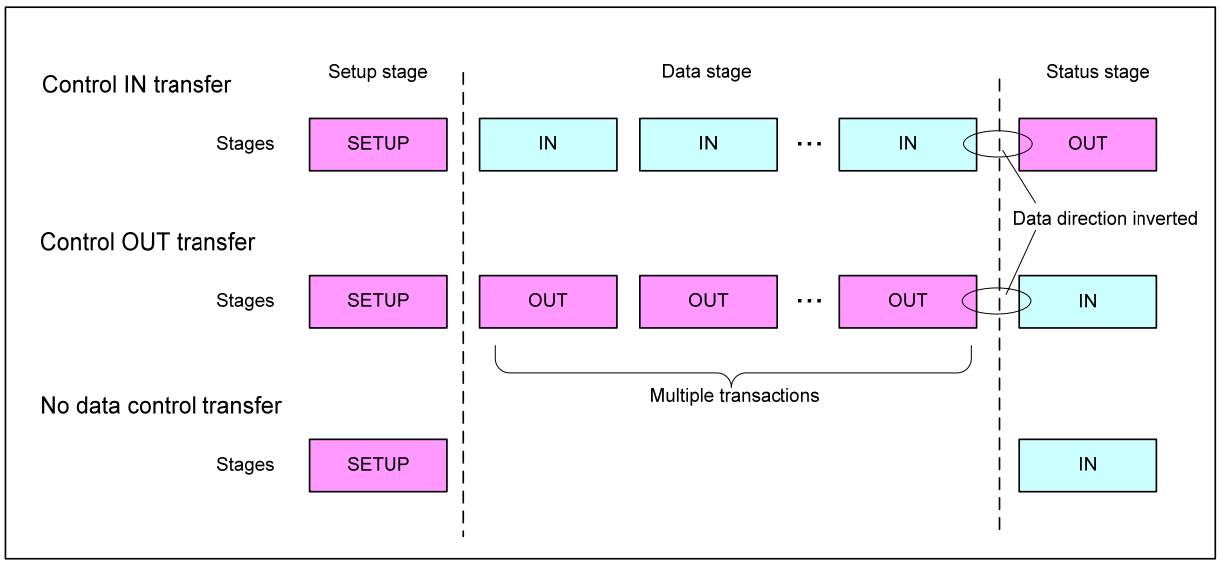

Figure 2.4 Stage Configuration During Control Transfer

The USB function module decodes the request, and automatically processes the Data stage and Status stage according to the USB standard request. However, some USB standard requests, class requests, and vendor requests should be executed by the software.

The sample program executes the Get Descriptor command, which is the USB standard request to be processed by the software. To convert USB communication into serial communication, the sample program executes USB communication class requests. Table 2.3 lists USB Commands and Processing in the Sample Program.

When the sample program receives a USB command that it does not support, it returns a STALL handshake.

Table 2.3 USB Commands and Processing in the Sample Program

USB Command	Type	Processing in the Sample Program
Clear Feature Get Configuration Get Interface Get Status Set Address Set Configuration Set Feature Set Interface	USB standard request	The hardware decodes the command, and executes the Data stage and the Status stage automatically. The software does nothing.
Get Descriptor		The software decodes the command, and executes the Data stage and the Status stage.
Set Line Coding Set Control Line State Send Break Get Line Coding	USB communication class request	
Other USB commands	-	The software returns a STALL handshake.

2.4.1 Setup Stage

The Setup stage is composed of one setup transaction. The USB host sends a setup token or data packet (USB command), then returns a handshake in response to the data packet (USB command) that the USB device received. Figure 2.5 shows the Setup Transaction Flowchart.

The USB function module automatically executes the Setup stage, Data stage, and Status stage in response to the USB requests (with some exceptions). If the received request is not a USB standard request, the USB function module holds the received request in the EP0S data register (USBEPDR0S), and generates the setup request receive complete interrupt using the SETUPTS bit in the USBIFR0 register.

The sample program reads the USB request held in the data register (USBEPDR0S) during the interrupt, and decodes the USB request to determine how to process subsequent stages. If the decoded USB request is a request to execute the control IN transfer, the sample program writes the first data to transfer to the USB host in the EP0iFIFO and the interrupt is completed. Figure 2.6 shows an operation chart of the sample program. The function (DecComCommand) processes USB communication class requests in the sample program.

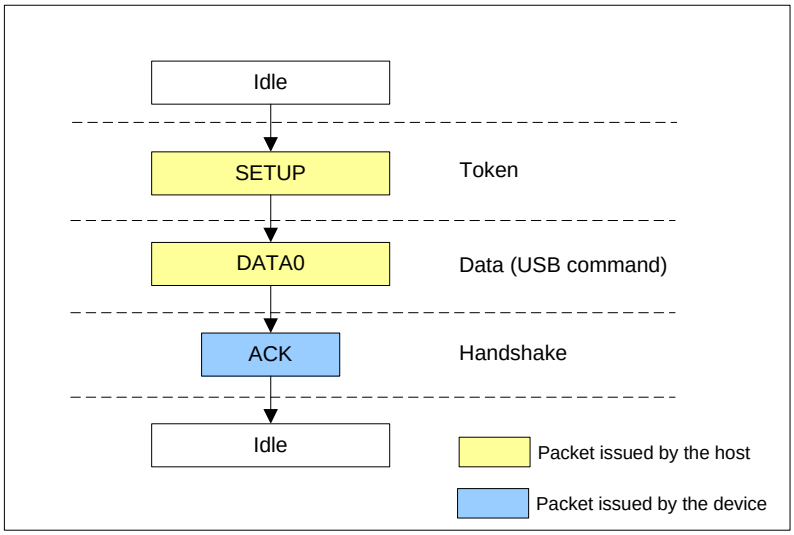

Figure 2.5 Setup Transaction Flowchart

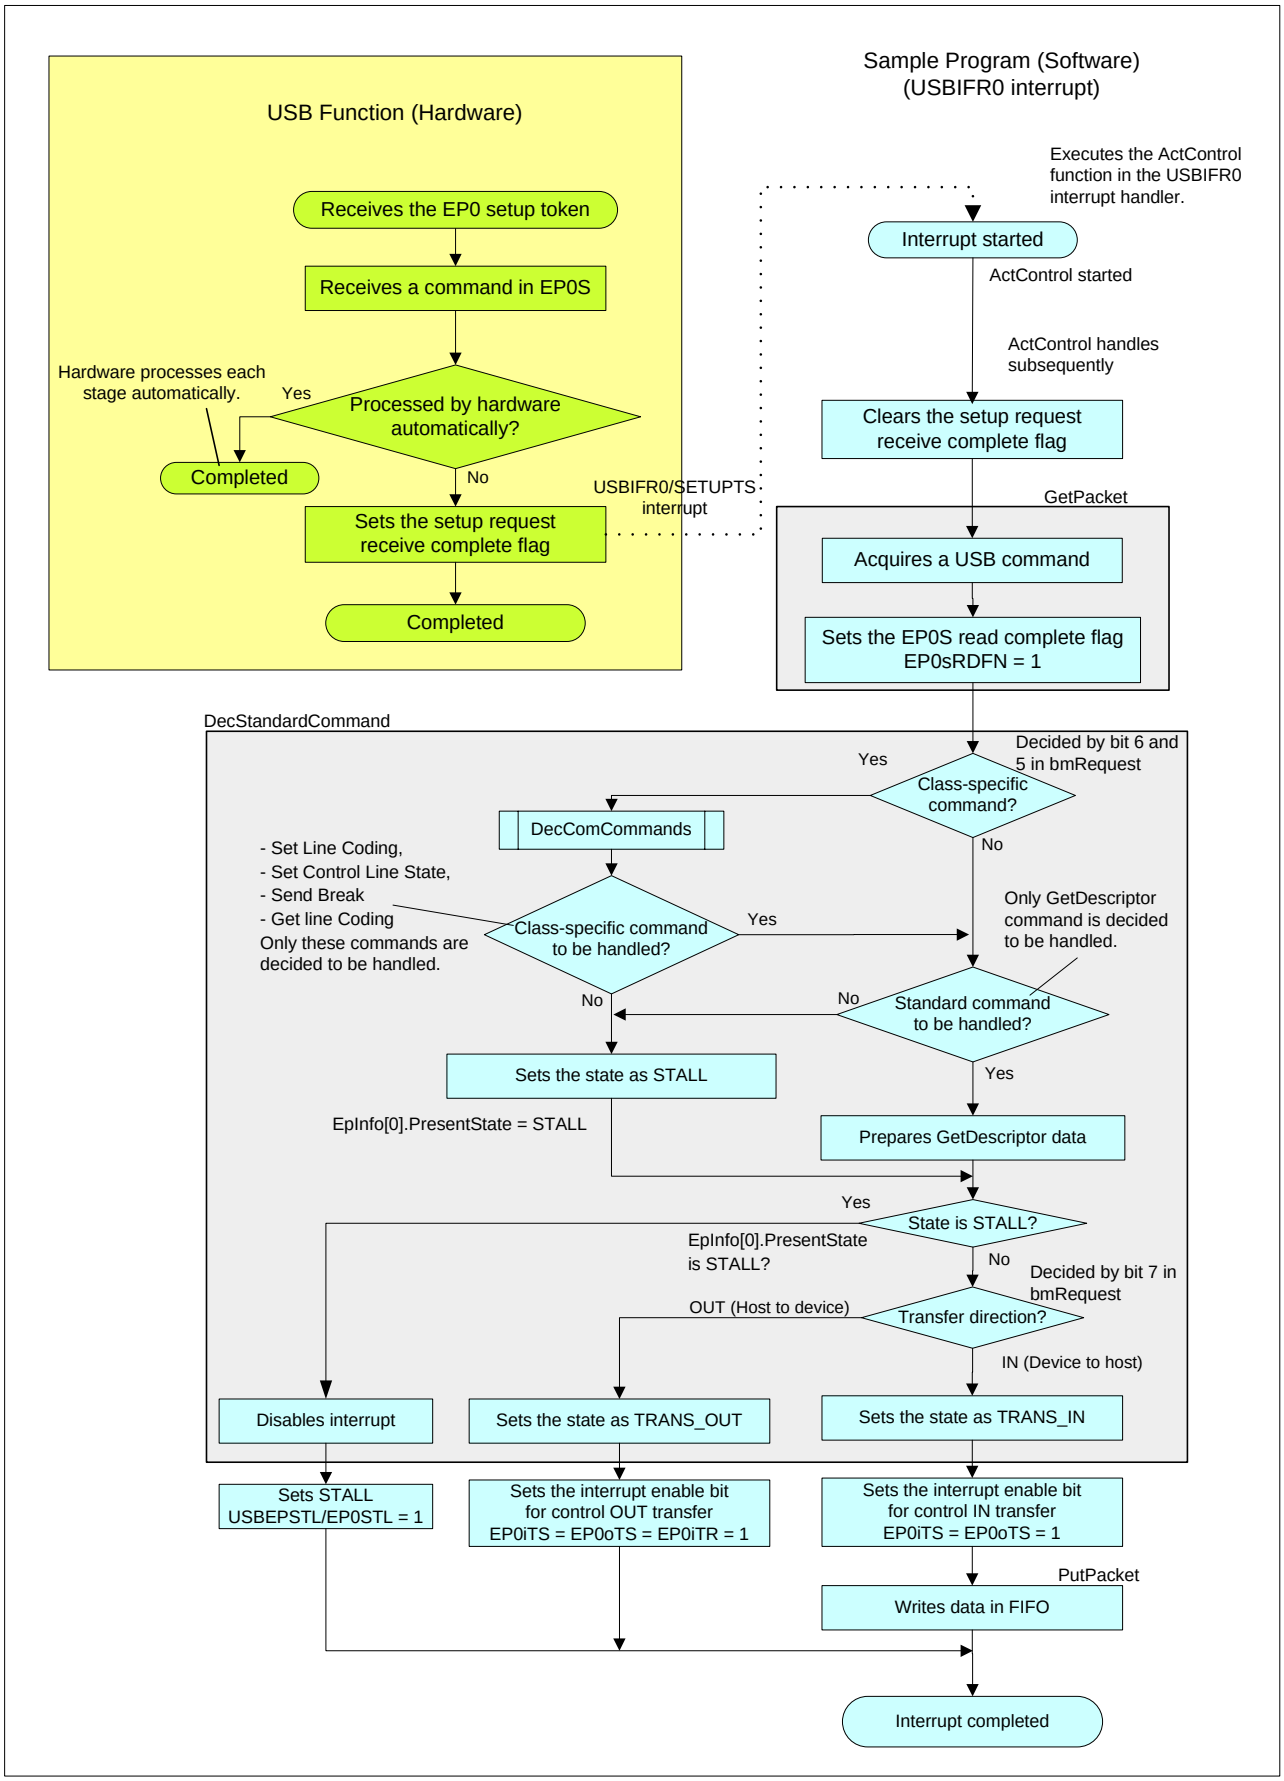

Figure 2.6 Setup Stage

2.4.2 Data Stage

The Data stage of the control IN transfer is composed of single or multiple data transactions. This is called “Data IN stage processing”. The Data stage of the control OUT transfer is composed of one data OUT transaction. This is called “Data OUT stage processing”.

(1) Data IN Stage

First, the USB host sends an IN token. When the USB device receives the IN token, it sends a data packet to the USB host and waits for an ACK handshake from the USB host. If the USB device cannot send a data packet when it receives the IN token, it returns a NAK handshake to the USB host. Figure 2.7 shows the data IN transaction flowchart.

When the USB function module receives an IN token without valid data in the EP0iFIFO, it automatically returns a NAK handshake to the USB host. When the module receives an IN token with valid data in the EP0iFIFO, it sends the data in the EP0iFIFO to the USB host and waits for an ACK handshake from the USB host. When the USB function module receives an ACK handshake, it generates the data transmit complete interrupt using the EP0iTS bit in the USBIFR0 register. On the contrary, when the module receives an OUT token that indicates the Data IN stage has been completed, it generates the data receive complete interrupt using the EP0oTS bit in the USBIFR0 register.

The sample program identifies the type of the interrupt while it is being processed. When it is the data receive complete interrupt (the EP0oTS bit in the USBIFR0 register), the sample program advances to the Status stage. When it is the data transmit complete interrupt (the EP0iTS bit in the USBIFR0 register), data that should be sent to the USB host is written in the EP0iFIFO, and the sample program waits for the next interrupt. Figure 2.8 shows an operation flowchart of the Data IN stage by the sample program.

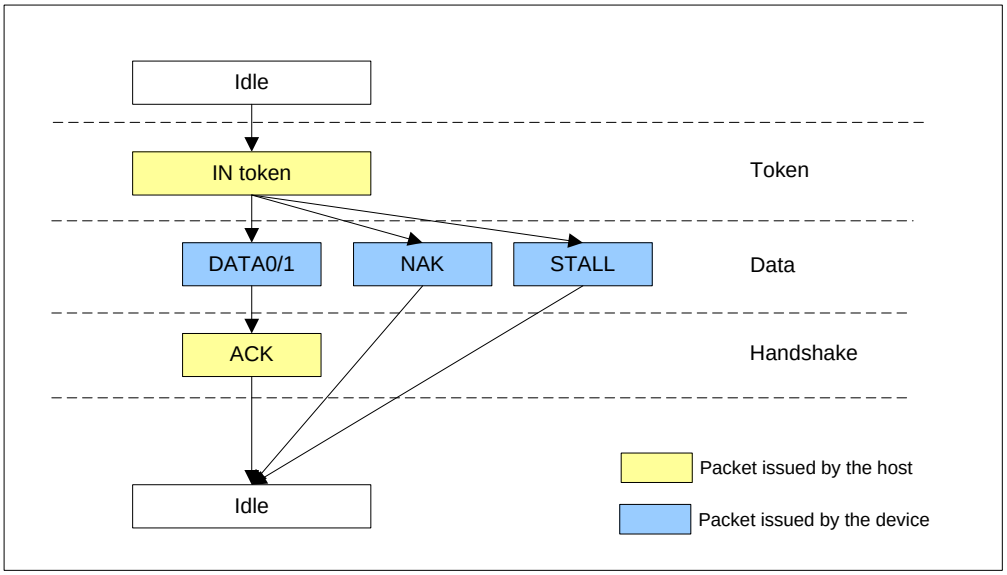

Figure 2.7 Data IN Transaction

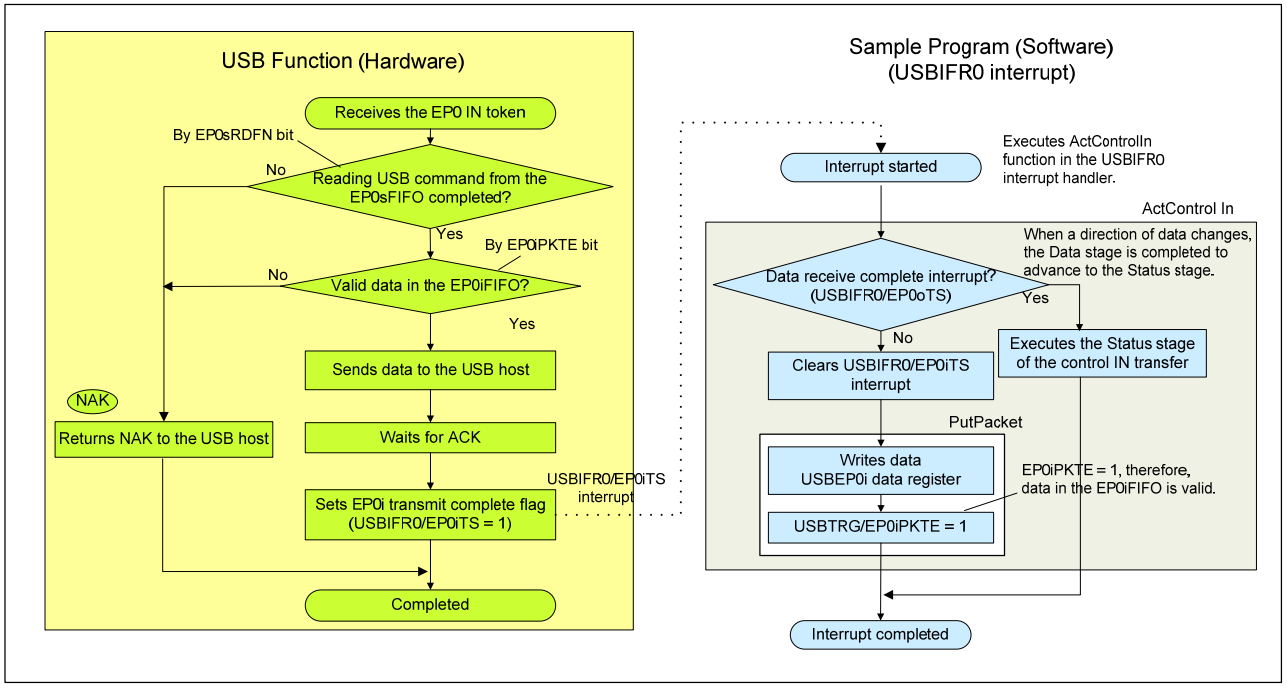
USB Function (Hardware)
Receives the EP0 IN token
By EP0sRDFN bit
No
Reading USB command from the EP0sFIFO completed?
Yes
By EP0iPKTE bit
No
Valid data in the EP0iFIFO?
Yes
Sends data to the USB host
NAK
Returns NAK to the USB host
Waits for ACK
USBIFR0/EP0iTS interrupt
Sets EP0i transmit complete flag (USBIFR0/EP0iTS = 1)
Completed
Sample Program (Software)
(USBIFR0 interrupt)
Interrupt started
Executes ActControlIn function in the USBIFR0 interrupt handler.
ActControl In
When a direction of data changes, the Data stage is completed to advance to the Status stage.
Data receive complete interrupt? (USBIFR0/EP0oTS)
Yes
No
Executes the Status stage of the control IN transfer
Clears USBIFR0/EP0iTS interrupt
PutPacket
Writes data USBEP0i data register
EP0iPKTE = 1, therefore, data in the EP0iFIFO is valid.
USBTRG/EP0iPKTE = 1
Interrupt completed

Figure 2.8 Data IN Stage (Control IN Transfer)

(2) Data OUT Stage

The USB host sends an OUT token and a data packet. The USB device receives the OUT token first, then receives the data packet, and then returns an ACK handshake. When the USB device cannot receive the data packet after it receives the OUT token, it ignores subsequent data packets, and returns a NAK handshake. When the USB host receives a NAK handshake, it tries to resend the OUT token and data packet. Figure 2.9 shows the Data OUT Transaction flowchart.

When the USB function module cannot receive data packets, when it receives the OUT token, it automatically discards the subsequent data packet and returns a NAK handshake to the USB host. When it receives the OUT token when it can accept data, it holds the data packet from the USB host in the EP0oFIFO and returns an ACK handshake to the USB host. After the USB function module transmits an ACK handshake, it generates the data receive complete interrupt using the EP0oTS bit in the USBIFR0 register. When the function module receives the IN token that indicates the Data OUT stage is completed, it generates the IN token receive interrupt using the EP0iTR bit in the USBIFR0 register.

The sample program identifies the type of the interrupt while it is being processed. When it is not the data receive complete interrupt (the EP0oTS bit in the USBIFR0 register), the sample program advances to the Status stage. When it is the data receive complete interrupt (the EP0oTS bit in the USBIFR0 register), the sample program reads data in the EP0oFIFO, sets the EP0oFIFO read complete bit, and waits for the next interrupt to be generated. Figure 2.10 shows an operation flowchart of Data OUT stage by the sample program.

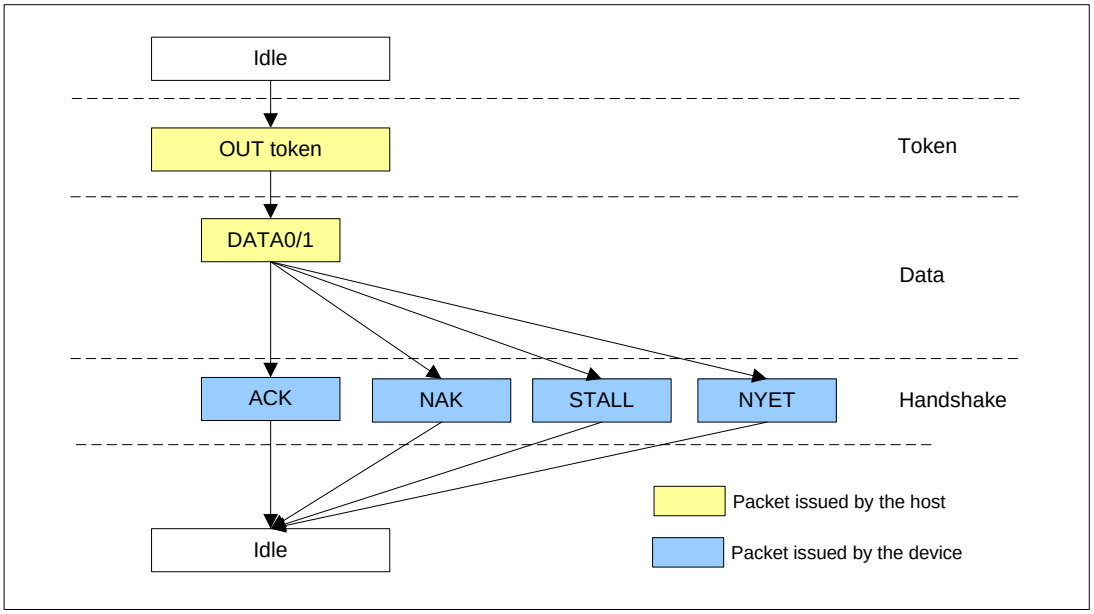

Figure 2.9 Data OUT Transaction

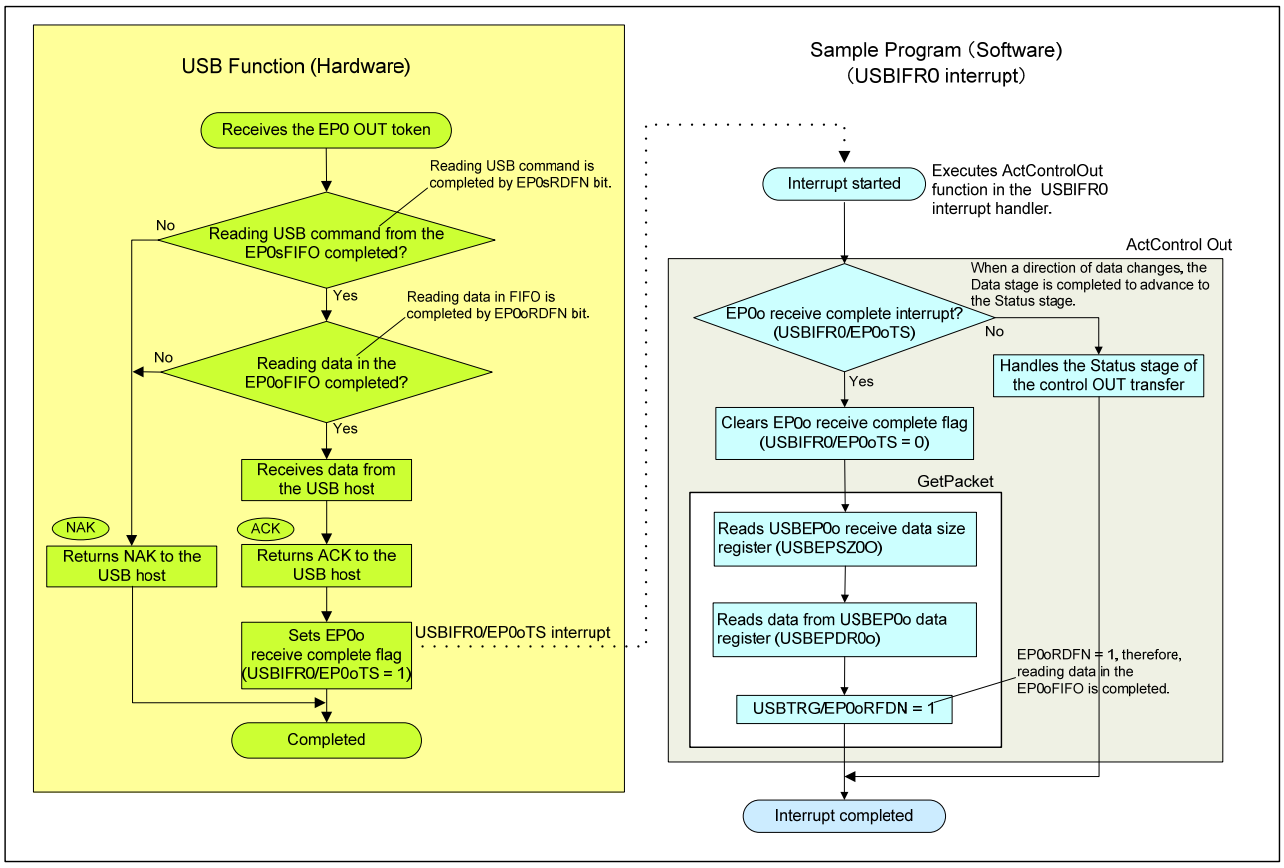
USB Function (Hardware)
Receives the EP0 OUT token
Reading USB command is completed by EP0sRDFN bit.
No
Reading USB command from the EP0sFIFO completed?
Yes
Reading data in FIFO is completed by EP0oRDFN bit.
No
Reading data in the EP0oFIFO completed?
Yes
Receives data from the USB host
NAK
Returns NAK to the USB host
ACK
Returns ACK to the USB host
Sets EP0o receive complete flag (USBIFR0/EP0oTS = 1)
USBIFR0/EP0oTS interrupt
Completed
Sample Program (Software)
(USBIFR0 interrupt)
Interrupt started
Executes ActControlOut function in the USBIFR0 interrupt handler.
ActControl Out
When a direction of data changes, the Data stage is completed to advance to the Status stage.
EP0o receive complete interrupt? (USBIFR0/EP0oTS)
No
Handles the Status stage of the control OUT transfer
Yes
Clears EP0o receive complete flag (USBIFR0/EP0oTS = 0)
GetPacket
Reads USBEP0o receive data size register (USBEPSZ0O)
Reads data from USBEP0o data register (USBEPDR0o)
USBTRG/EP0oRFDN = 1
EP0oRDFN = 1, therefore, reading data in the EP0oFIFO is completed.
Interrupt completed

Figure 2.10 Data OUT Stage (Control OUT Transfer)

2.4.3 Status Stage

The direction of the data transaction in the Status stage differs from that of the Data stage; the data OUT transaction is executed during the Status stage of the control IN transfer, and the data OUT transaction is executed during the Status stage of the control OUT transfer.

(1) Status Stage of the Control IN Transfer

The USB host sends an OUT token and a 0-byte data packet. The USB device first receives the OUT token and then receives the 0-byte data packet. Then, it returns an ACK handshake to the USB host.

The USB function module receives the OUT token and the 0-byte data packet, and automatically sends an ACK handshake to the USB host. Then, the USB function module generates the data receive complete interrupt using the EP0oTS bit in the USBIFR0 register.

The sample program sets the EP0oFIFO read complete bit (USBTRG/EP0oRFDN) during an interrupt to wait for the next interrupt. Figure 2.11 shows an operation flowchart of the control IN transfer by the sample program.

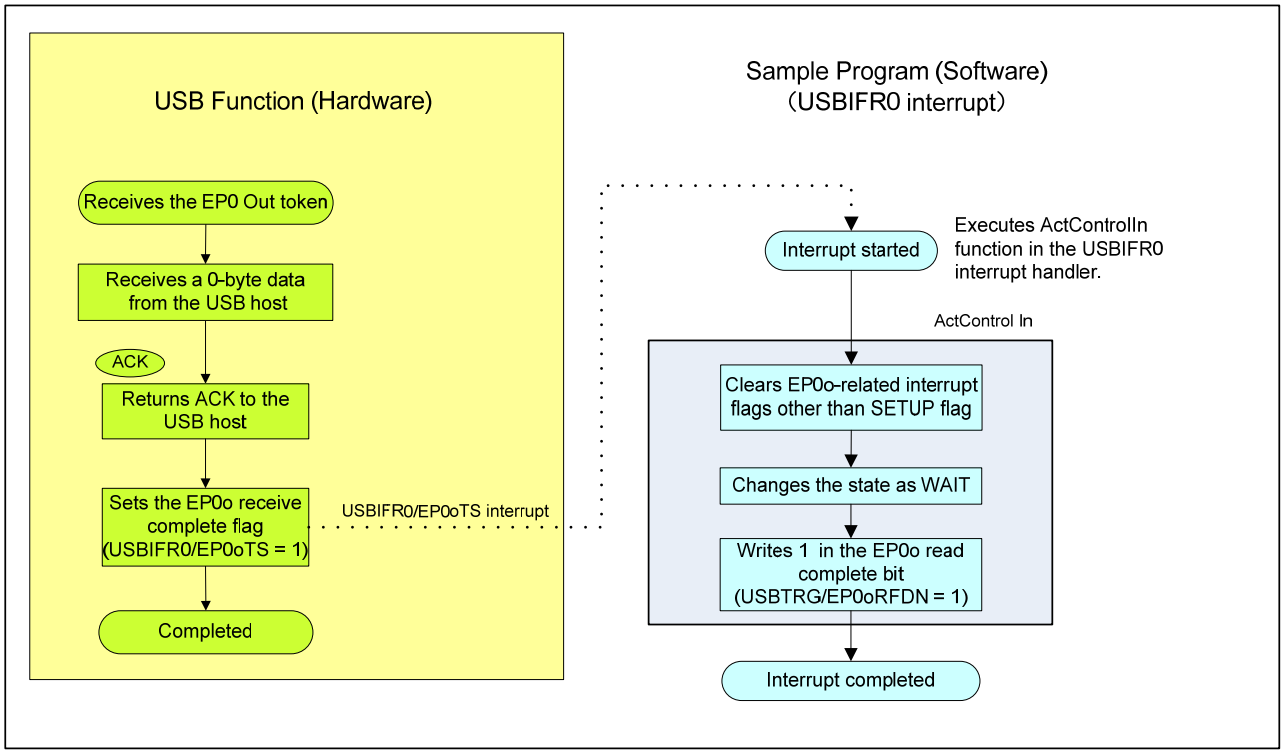
USB Function (Hardware)
Sample Program (Software)
(USBIFR0 interrupt)
Receives the EP0 Out token
Receives a 0-byte data from the USB host
ACK
Returns ACK to the USB host
Sets the EP0o receive complete flag (USBIFR0/EP0oTS = 1)
USBIFR0/EP0oTS interrupt
Completed
Interrupt started
Executes ActControlIn function in the USBIFR0 interrupt handler.
ActControl In
Clears EP0o-related interrupt flags other than SETUP flag
Changes the state as WAIT
Writes 1 in the EP0o read complete bit (USBTRG/EP0oRFDN = 1)
Interrupt completed

Figure 2.11 Status Stage (Control IN Transfer)

(2) Status Stage of the Control OUT Transfer

The USB host sends an IN token. The USB device sends a 0-byte data packet to the USB host after it receives the IN token. Then, the USB device waits for an ACK handshake from the USB host.

When the USB function module receives the IN token, it generates the IN token receive interrupt using the EP0iTR bit in the USBIFR0 register. When the USB function module receives an IN token although there is no valid 0-byte data packet in the EP0iFIFO, it automatically returns a NAK handshake to the USB host. When the USB function module has a valid 0-byte data packet in the EP0iFIFO when it receives the IN token, it sends a 0-byte data packet to the USB host and waits for an ACK handshake from the USB host. When the USB function module receives the ACK handshake, it generates the data transmit complete interrupt using the EP0iTS in the USBIFR0 register.

The sample program identifies the type of the interrupt while it is being processed. When it is the data transmit complete interrupt generated by the EP0iTS in the USBIFR0 register, the sample program clears the interrupt to complete the control transfer. When it is the IN token receive interrupt generated by the EP0iTR bit in the USBIFR0 register, the sample program enables 0-byte data in the EP0iFIFO by setting the EP0iPKTE bit in the USBTRG register to 1, and waits for the next interrupt to be generated. Figure 2.12 shows an operation flowchart of the Status Stage (Control OUT Transfer) by the sample program. When the command is a USB communication class command (Set Line Coding), the sample program uses a SciInit function to process the command.

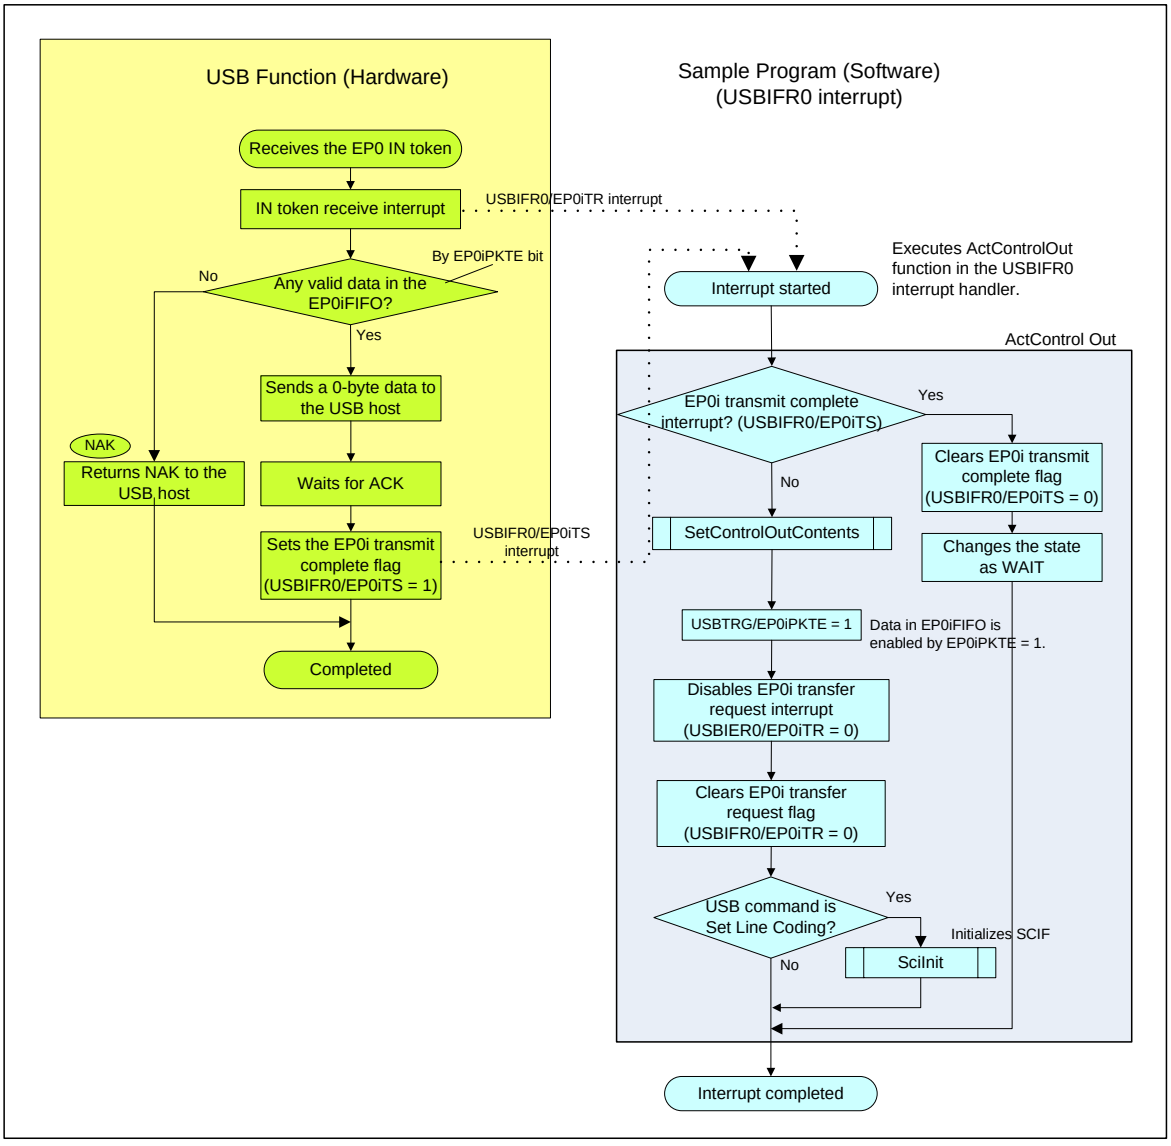

Figure 2.12 Status Stage (Control OUT Transfer)

2.5 Bulk Transfer

A bulk transfer is used to communicate large amounts of data between the USB host and the USB device. Bulk transfers are supported via bi-directional communication flow, according to the data direction. A bulk OUT transfer is the data flow from the USB host to the USB device, and a bulk IN transfer is the data flow from the USB device to the USB host. Figure 2.13 shows data directions of the bulk IN and bulk OUT transfers.

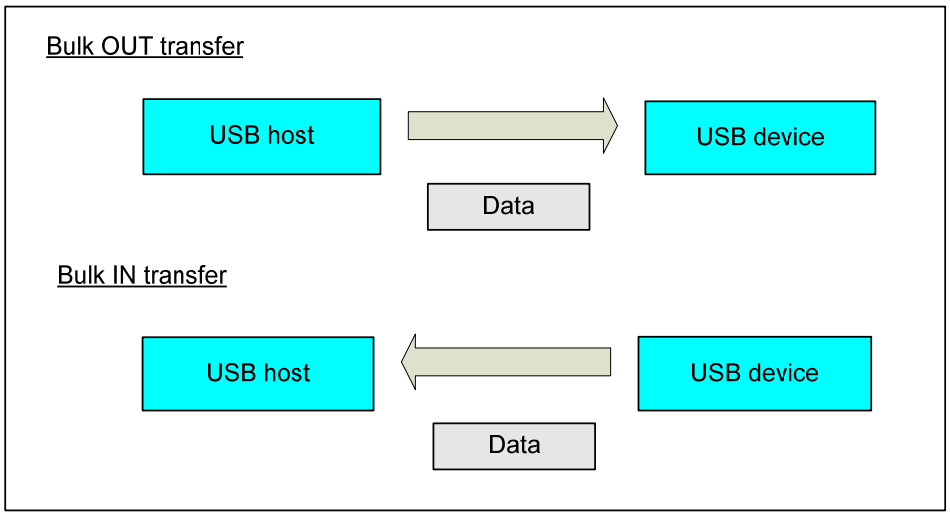

Figure 2.13 Bulk Transfer

2.5.1 Bulk OUT Transfer

A bulk OUT transfer is composed of single or multiple OUT transactions. The USB host sends an OUT token and a data packet in the OUT transaction. The USB device receives the out token first, then receives the data packet, and then returns an ACK handshake. When the USB device receives the OUT token although it is unable to receive data packets, it ignores subsequent data packets and returns a NAK handshake. When the USB host receives a NAK handshake, it attempts to resend the OUT token and data packet to the USB device. Figure 2.14 shows the OUT Transaction flowchart.

When the USB function module receives an OUT token although it is unable to receive data packets, it automatically discards subsequent data packets and returns a NAK handshake to the USB host. When the USB function module receives an OUT token when it can accept data packets, it holds the data from the USB host in the EP1FIFO and returns an ACK handshake to the USB host. Then, the USB function module generates the data receive complete interrupt using the EP1FULL bit in the USBIFR0 register.

The sample program reads the data in the EP1FIFO and stores it in the bulk OUT transfer RAM during the interrupt, sets the EP1 read complete flag (by setting the EP1RDFN bit in the USBTRG register to 1), and waits for the next interrupt to be generated. When the interrupt is generated, if there is no area in the EP1FIFO to store data, the sample program disables the EP1FULL interrupt, and the interrupt process is completed while it is in a suspended state. When serial communication is used to create an area in the bulk OUT transfer RAM, enabling the EP1FULL interrupt causes the suspended EP1FULL interrupt to be generated, and moves the data in the EP1FIFO to the bulk OUT transfer RAM during the interrupt, and sets the EP1 read complete flag to wait for the next interrupt to be generated.

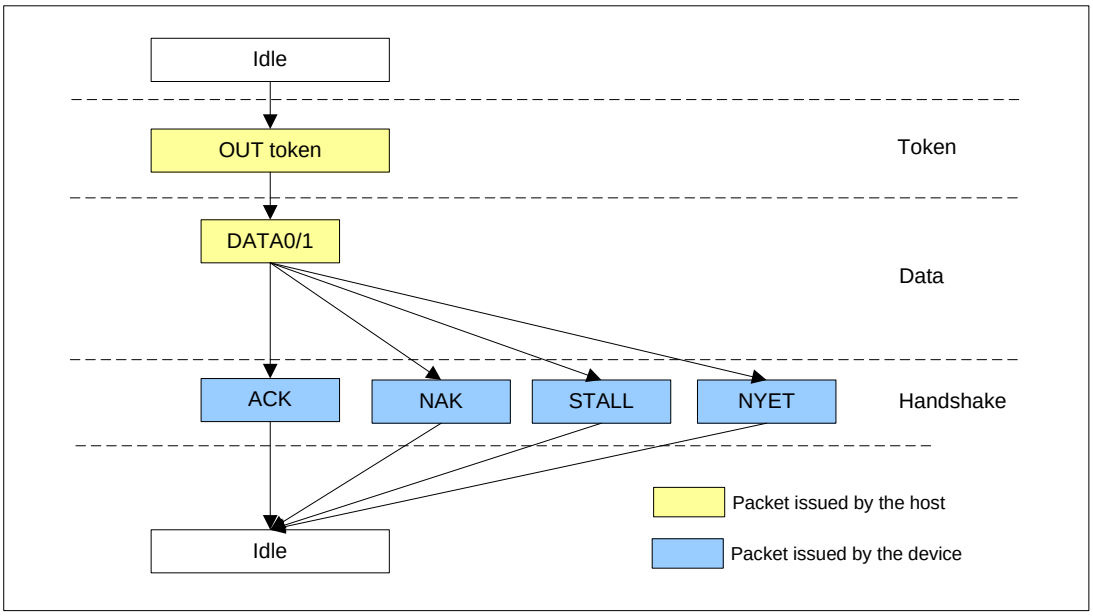

Figure 2.14 OUT Transaction

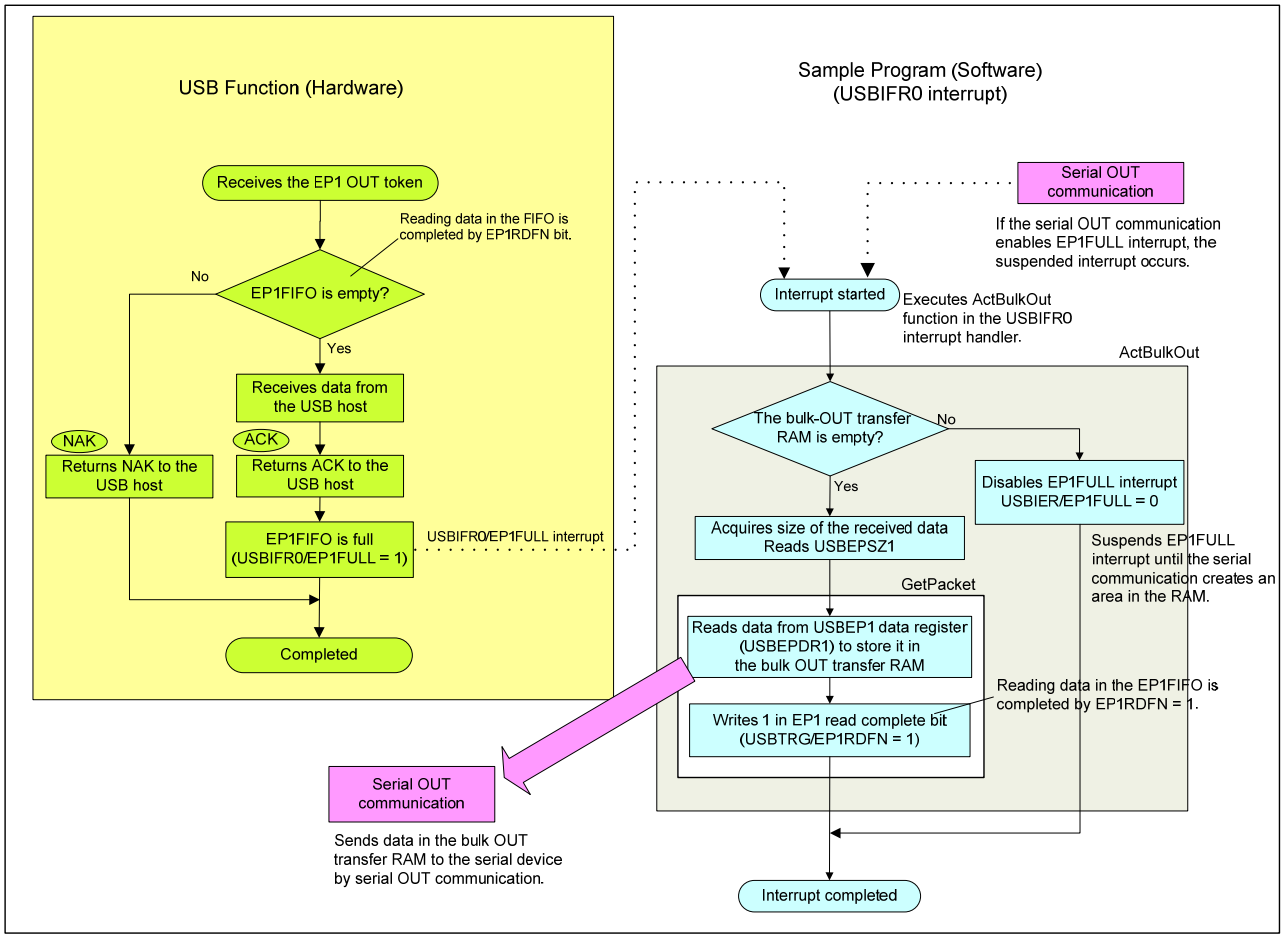
USB Function (Hardware)
Sample Program (Software)
(USBIFR0 interrupt)
Receives the EP1 OUT token
Reading data in the FIFO is completed by EP1RDFN bit.
No
EP1FIFO is empty?
Yes
Receives data from the USB host
NAK
ACK
Returns NAK to the USB host
Returns ACK to the USB host
EP1FIFO is full (USBIFR0/EP1FULL = 1)
USBIFR0/EP1FULL interrupt
Completed
Serial OUT communication
If the serial OUT communication enables EP1FULL interrupt, the suspended interrupt occurs.
Interrupt started
Executes ActBulkOut function in the USBIFR0 interrupt handler.
ActBulkOut
The bulk-OUT transfer RAM is empty?
No
Yes
Disables EP1FULL interrupt USBIER/EP1FULL = 0
Suspends EP1FULL interrupt until the serial communication creates an area in the RAM.
Acquires size of the received data Reads USBEPSZ1
GetPacket
Reads data from USBEP1 data register (USBEPDR1) to store it in the bulk OUT transfer RAM
Reading data in the EP1FIFO is completed by EP1RDFN = 1.
Writes 1 in EP1 read complete bit (USBTRG/EP1RDFN = 1)
Serial OUT communication
Sends data in the bulk OUT transfer RAM to the serial device by serial OUT communication.
Interrupt completed

Figure 2.15 Bulk OUT Transfer

2.5.2 Bulk IN Transfer

A bulk IN transfer consists of single or multiple transactions. The USB host sends an IN token in the IN transaction. When the USB device receives the IN token, it sends a data packet to the USB host and waits for an ACK handshake from the USB host. When the USB device receives the IN token although it is unable to send data packets, it returns a NAK handshake to the USB host. Figure 2.16 shows the IN Transaction flowchart.

When the USB function module receives an IN token although there is no valid data in the EP2FIFO, it automatically returns a NAK handshake to the USB host. The USB function module determines if there is any valid data in the EP2FIFO using the EP2PKTE bit in the USBTRG register. When the module receives the IN token when there is valid data in the EP2FIFO, the USB function module sends the data in the EP2FIFO to the USB host and waits for an ACK handshake from the USB host. When the ACK handshake is received, the USB function module sets the data transmit complete flag using the EP2EMPTY bit in the USBIFR0 register.

The sample program periodically transfers data in bulk transfer mode within the main loop. When the serial communication generates data in the bulk IN transfer RAM that should be transmitted to the USB host, the sample program confirms if the EP2FIFO is empty. When the EP2FIFO is empty, the sample program writes the data in the EP2FIFO, sets the PE2PKTE bit to 1, and enables the data in the EP2FIFO. When the EP2FIFO is not empty, the sample program is idle and waits for the USB function module to finish transferring data to the USB host.

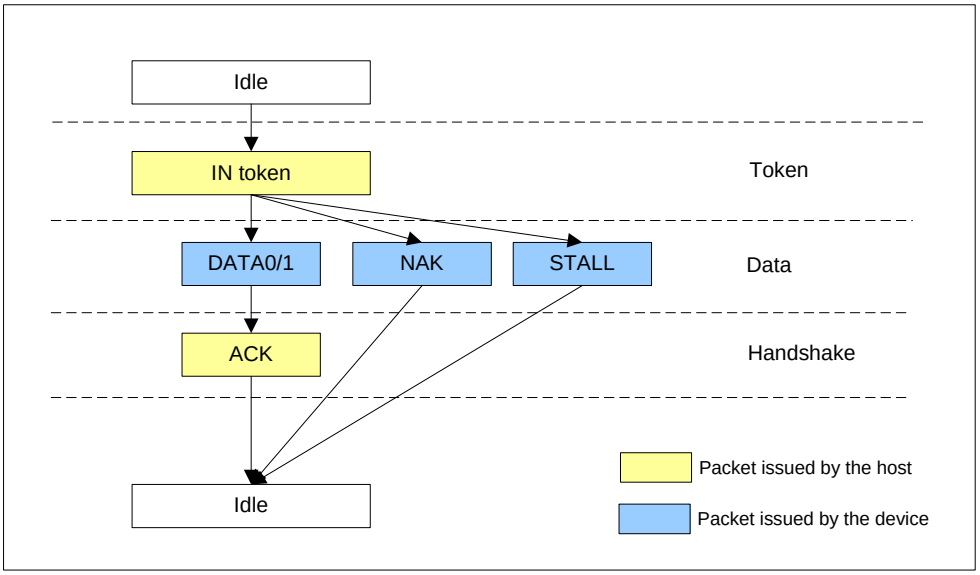

Figure 2.16 IN Transaction

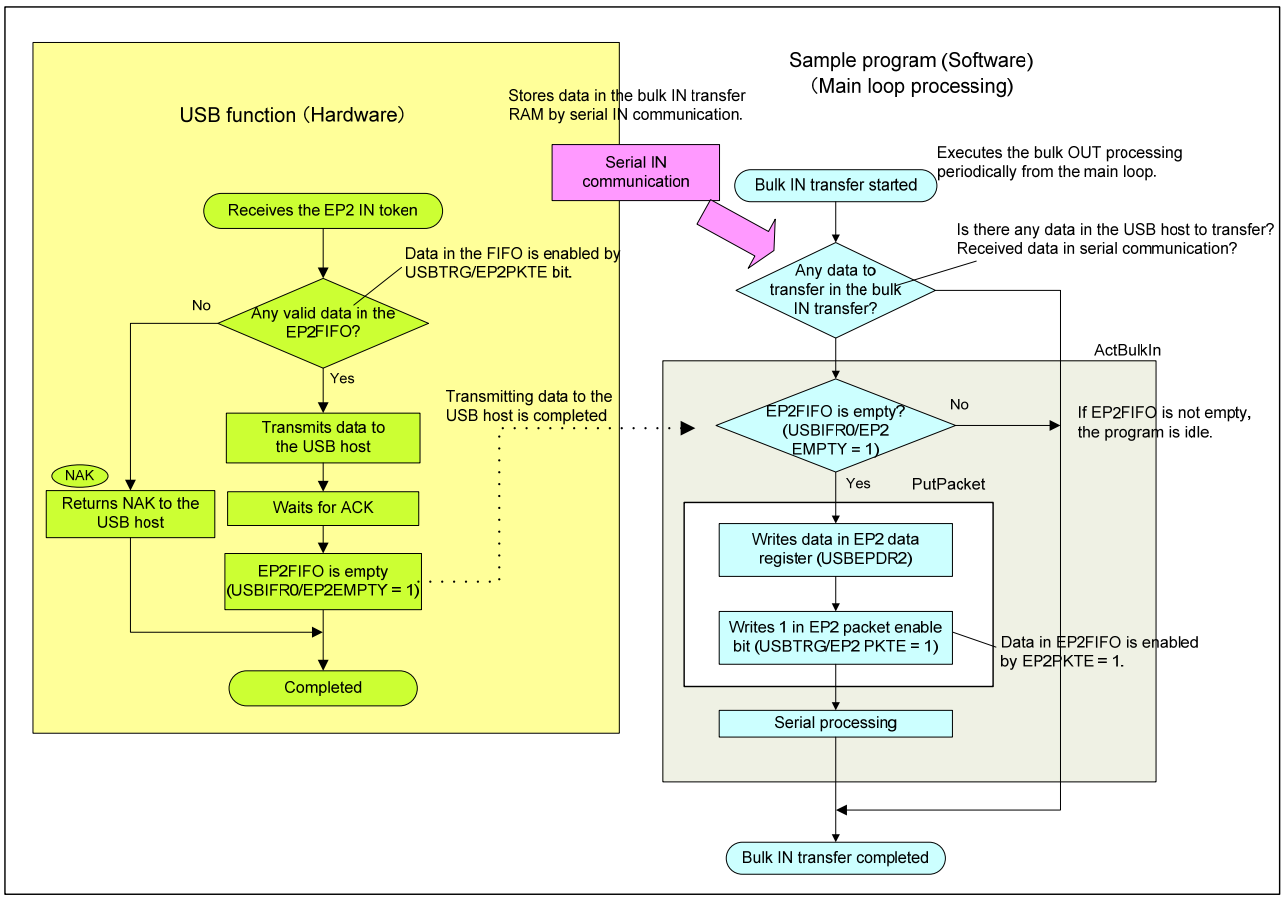
USB function (Hardware)
Sample program (Software)
(Main loop processing)
Stores data in the bulk IN transfer RAM by serial IN communication.
Serial IN communication
Bulk IN transfer started
Executes the bulk OUT processing periodically from the main loop.
Receives the EP2 IN token
Data in the FIFO is enabled by USBTRG/EP2PKTE bit.
Is there any data in the USB host to transfer? Received data in serial communication?
Any data to transfer in the bulk IN transfer?
No
Any valid data in the EP2FIFO?
Yes
ActBulkIn
Transmitting data to the USB host is completed
EP2FIFO is empty? (USBIFR0/EP2 EMPTY = 1)
No
If EP2FIFO is not empty, the program is idle.
Transmits data to the USB host
NAK
Yes
PutPacket
Returns NAK to the USB host
Waits for ACK
Writes data in EP2 data register (USBEPDR2)
EP2FIFO is empty (USBIFR0/EP2EMPTY = 1)
Writes 1 in EP2 packet enable bit (USBTRG/EP2 PKTE = 1)
Data in EP2FIFO is enabled by EP2PKTE = 1.
Completed
Serial processing
Bulk IN transfer completed

Figure 2.17 Bulk IN Transfer

3. USB to Serial Conversion System Using the USB Function Module

3.1 Overview

The sample program converts USB to serial using the USB function module and the serial communication interface embedded in the SH7285 MCU. To transfer keyboard-input characters, text files, or binary files, activate the terminal software both on the USB host (a computer in this case), and on the serial device. For example, some characters are input using the keyboard of the USB host, and the characters are transferred to the serially connected device. On the other hand, some characters are input using keyboard of the serially connected device for transfer to the USB host.

A system configuration of the USB to serial conversion is shown in Figure 3.1, and Table 3.1 lists its specifications.

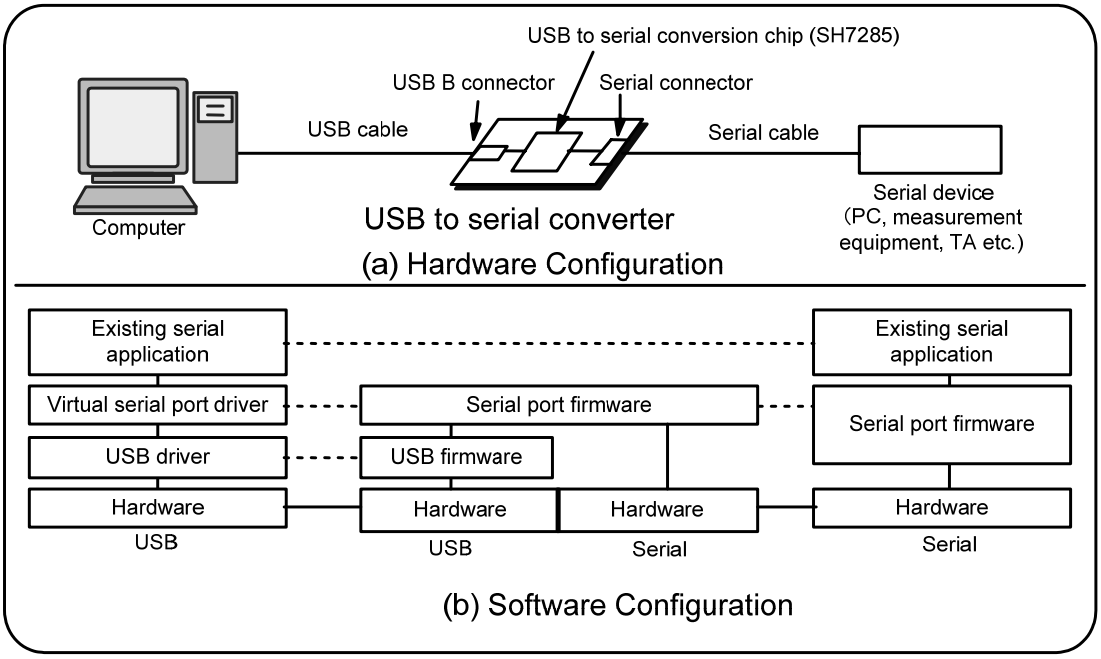

Figure 3.1 System Configuration

Table 3.1 Specifications

Features	Description
Detect a connection to the USB host	After the hardware detects a connection, the port pulls up the D+ pin.
Control transfer (USB standard request)	• Decode requests, processes the Data stage and Status stage of the USB request transmitted from the USB host in the control transfer. • Sends the descriptor information shown in Figure 3.2 through Figure 3.4 to Get Descriptor command to connect with the USB host PC as a USB communication class. • Descriptor samples to send to the USB host are shown in the SetUsbInfo.h file. Figure 3.2 shows the device descriptor sample, Figure 3.3 and Figure 3.4 shows the configuration descriptor samples. Table 3.2 lists Vendor ID and Product ID of the sample.
Control transfer (USB communication class request)	Executes the following USB communication class commands: Get Line Coding, Set Line Coding, Set Control Line State, and Send Break
Bulk IN/OUT transfer	Executes the bulk IN/OUT transfer.
Serial/USB communication conversion	(1) Sends the received data from the USB host in bulk OUT transfer to the serial device by serial OUT communication. (2) Sends the received data from the serial device by serial IN communication to the USB host in bulk IN transfer.

```
/*    Descriptor Information */
/*    Device Descriptor      */
      unsigned char          DeviceItem[] = {
              0x12,0x01,0x10,0x01,
              0x02,   /* Communication Class */
              0x00,0x00,0x08,
              0x5B,   /* Vendor = Renesas Technology */
              0x04,   /*      ""Attention"" Please use your company Vendor ID      */
              0x20,   /* Product ID 0x0020 */
              0x00,0x00,0x01,0x00,0x00,
              0x03,   /* Strings Descriptor iSerialNumber */
              0x01
      };

DeviceType           deviceDiscriptorGVar[] = {
      {18,DeviceItem}
};
```

Figure 3.2 Device Descriptor Sample

Note:

Table 3.2 lists the default value of the vendor ID and product ID in the device descriptor sample. These values MUST be changed when applied to the user system.

Table 3.2 Vendor ID and Product ID Sample

ID	Value	Description
Vendor ID	0x045B	Renesas Technology
Product ID	0x0020	Renesas SH7285 Serial-USB

```
/*    Configuration Descriptor      */
      /*     Configuration Descriptor informations , Data length = 67Byte       */
      unsigned char          configurationItem[] = {
             /* Configuration Descriptor */
             0x09,   /*      0:bLength */
             0x02,   /*      1:bDescriptorType */
             0x43,   /*      2:wTotalLength(L) */   /* 43'h (=67) */
             0x00,   /*      3:wTotalLength(H) */
             0x02,   /*  4:bNumInterfaces */
             0x01,   /*  5:bConfigurationValue */
             0x00,   /*  6:iConfiguration */
             0xC0,   /*      7:bmAttributes */      /* self powered */
             0x10,   /*      8:MAXPower */
                     /* Interface Descriptor 1-0-0 [Communication Class] */
                     0x09,   /*      0:bLength */
                     0x04,   /*      1:bDescriptor */
                     0x00,   /*      2:bInterfaceNumber */
                     0x00,   /*      3:bAlternateSetting */
                     0x01,   /*  4:bNumEndpoints */ /* support INT IN (= EP3) */
                     0x02,   /*  5:bInterfaceClass */      /* Communication Interface Class */
                     0x02,   /*  6:bInterfaceSubClass */    /* Abstruct Control Model */
                     0x01,   /*  7:bInterfaceProtocol */    /* Common AT commands */
                     0x00,   /*      8:iInterface */
                     /* Class-Specific Configuration Descriptors */
                     /* Header Functional Descriptor */
                     0x05,   /*  0:length of this desc. */
                     0x24,   /*  1:CS_INTERFACE */
                     0x00,   /*  2:Header Functional Descr. */
                     0x10,   /*  3:bcdCDC Rel. 1.10 */
                     0x01,   /*  4:bcdCDC Rel. 1.10 */
                     /* Abstract Control Management Functional Descriptor */
                     0x04,   /*  0:length of this desc. */
                     0x24,   /*  1:CS_INTERFACE */
                     0x02,   /*  2:Abstr.Contr.Managm. F.D. */
                     0x06,   /*  3:bmCapabilities */       /* support Send Break, Set Line Coding,
                                                             Set Control Line State, Get Line Coding */

                     /* Union Functional Descriptor */
                     0x05,   /*  0:length of this desc. */
                     0x24,   /*  1:CS_INTERFACE */
                     0x06,   /*  2:Union Functional Descr. */
                     0x00,   /*  3:bMasterInterface */
                     0x01,   /*  4:bSlaveInterface0 */
                     /* Call Management Functional Descriptor */
                     0x05,   /*  0:length of this desc. */
                     0x24,   /*  1:CS_INTERFACE */
                     0x01,   /*  2:Call Managment F.D. */
                     0x03,   /*  3:bmCapabilities */
                     0x01,   /*  4:bDataInterface */
                             /* Endpoint Descriptor 1-0-0-0 */
                             0x07,   /*  0:bLength */
                             0x05,   /*  1:bDescriptorType */
                             0x83,   /*  2:bEndpointAddress */     /* IN, number = 3 */
                             0x03,   /*  3:bmAttribute */
                             0x08,   /*  4:wMAXPacketSize_lo */
                             0x00,   /*  5:wMAXPacketSize_hi */
                             0x10,   /*  6:bInterval */
```

Figure 3.3 Configuration Descriptor Sample (1/2)

```
                    /* Interface Descriptor 1-1-0 [Data Class Interface] */
                    0x09,   /*  0:bLength */
                    0x04,   /*  1:bDescriptor */
                    0x01,   /*  2:bInterfaceNumber */
                    0x00,   /*  3:bAlternateSetting */
                    0x02,   /*  4:bNumEndpoints */ /* support Bulk OUT (= EP1) and Bulk IN (= EP2) */
                    0x0A,   /*  5:bInterfaceClass */ /* Data Interface Class */
                    0x00,   /*  6:bInterfaceSubClass */   /* unuse */
                    0x00,   /*  7:bInterfaceProtocol */ /* USB */
                    0x00,   /*  8:iInterface */
                            /* Endpoint Descriptor 1-1-0-0 */
                            0x07,   /*  0:bLength */
                            0x05,   /*  1:bDescriptorType */
                            0x01,   /*  2:bEndpointAddress */
                            0x02,   /*  3:bmAttribute */
                            0x40,   /*  4:wMAXPacketSize_lo */
                            0x00,   /*  5:wMAXPacketSize_hi */
                            0x00,   /*  6:bInterval */
                            /* Endpoint Descriptor 1-1-0-1 */
                            0x07,   /*  0:bLength */
                            0x05,   /*  1:bDescriptorType */
                            0x82,   /*  2:bEndpointAddress */
                            0x02,   /*  3:bmAttribute */
                            0x40,   /*  4:wMAXPacketSize_lo */
                            0x00,   /*  5:wMAXPacketSize_hi */
                            0x00    /*  6:bInterval */
        };

        ConfigurationType             configurationDiscriptorGVar[] = {
                {67,configurationItem}
        };
```

Figure 3.4 Configuration Descriptor Sample (2/2)

3.2 Operation Flowchart

The sample program enters the main loop after initial settings are completed.

When the sample program receives a data packet from the serial device in serial IN communication, it stores the received packet in the bulk IN transfer RAM. The stored data is transmitted to the USB host in a bulk IN transfer. For details on bulk IN transfer, refer to 2.5.2 Bulk IN Transfer. For details on serial IN communication, refer to 3.3.2 Serial IN Communication.

When the sample program receives a data packet from the USB host in a bulk OUT transfer, it stores the received data packet in the bulk OUT transfer RAM. The stored data is transmitted to the serial device in the serial OUT communication. For details on the bulk OUT transfer, refer to 2.5.1 Bulk OUT Transfer. For details on serial OUT communication, refer to 3.3.1 Serial OUT Communication.

Figure 3.5 shows an Operation Flowchart and Figure 3.6 shows the Data Flow.

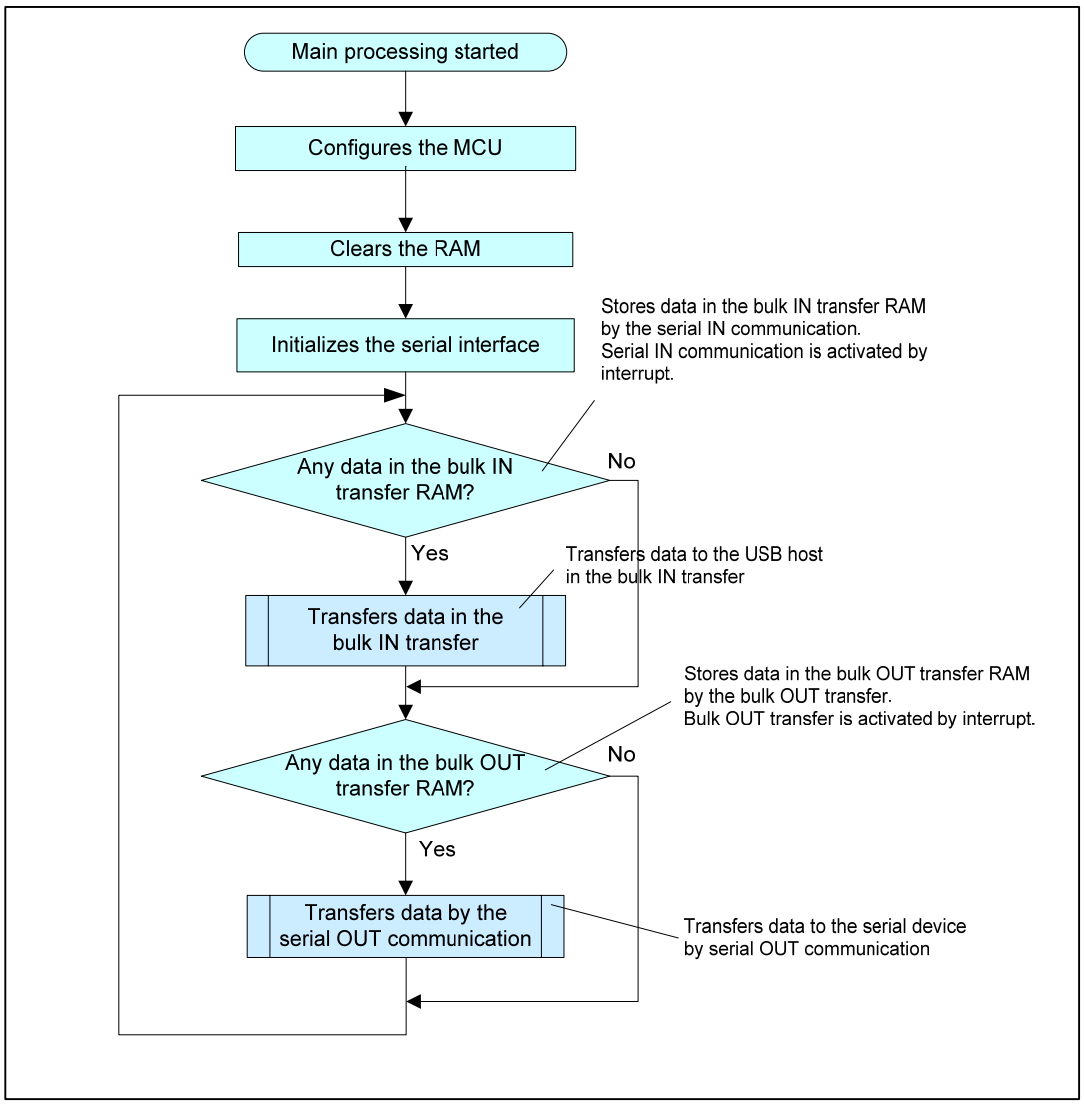
Main processing started
Configures the MCU
Clears the RAM
Initializes the serial interface
Stores data in the bulk IN transfer RAM by the serial IN communication. Serial IN communication is activated by interrupt.
Any data in the bulk IN transfer RAM?
No
Yes
Transfers data to the USB host in the bulk IN transfer
Transfers data in the bulk IN transfer
Stores data in the bulk OUT transfer RAM by the bulk OUT transfer. Bulk OUT transfer is activated by interrupt.
Any data in the bulk OUT transfer RAM?
No
Yes
Transfers data by the serial OUT communication
Transfers data to the serial device by serial OUT communication

Figure 3.5 Operation Flowchart

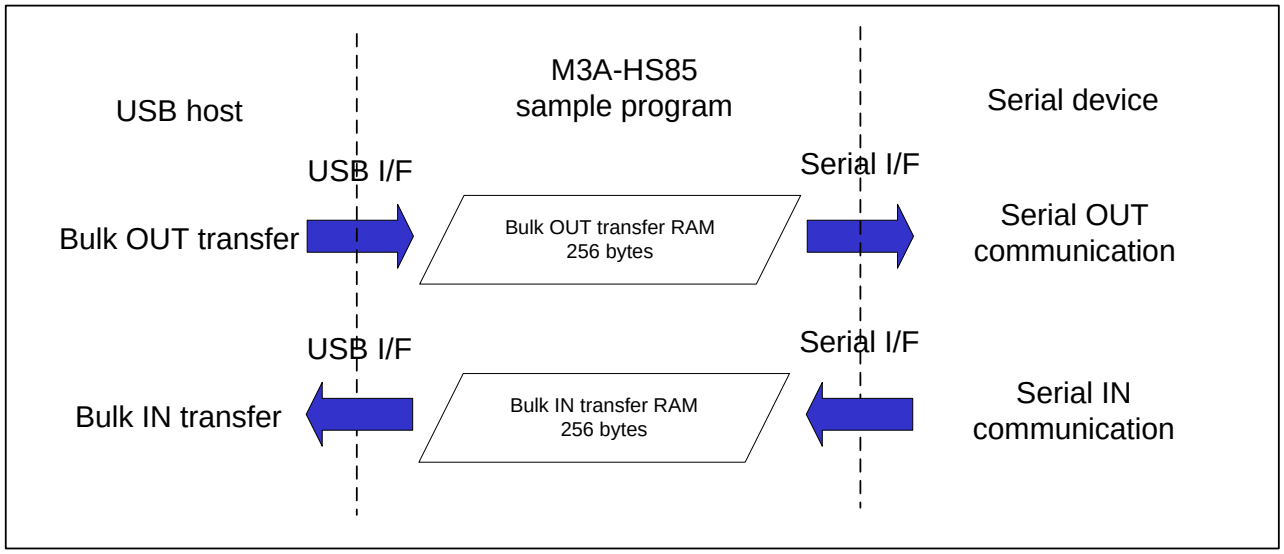

Figure 3.6 Data Flow

3.3 Serial Communication

The sample program uses a SCIF module[1] for serial communication. Serial OUT communication is executed only when there is data in the bulk OUT transfer RAM, and serial IN communication is executed only by the serial receive interrupt.

3.3.1 Serial OUT Communication

The sample program uses the ActSerialout function to execute serial OUT communication. Data in the bulk OUT transfer RAM is serially transmitted in serial OUT communication. When the bulk OUT transfer RAM is sufficiently empty by the serial OUT communication, the sample program enables the EP1FULL interrupt. When the EP1FULL interrupt is enabled, the suspended EP1FULL interrupt occurs to transfer data in the bulk OUT transfer. Figure 3.7 shows an operation flowchart of the Serial OUT Communication.

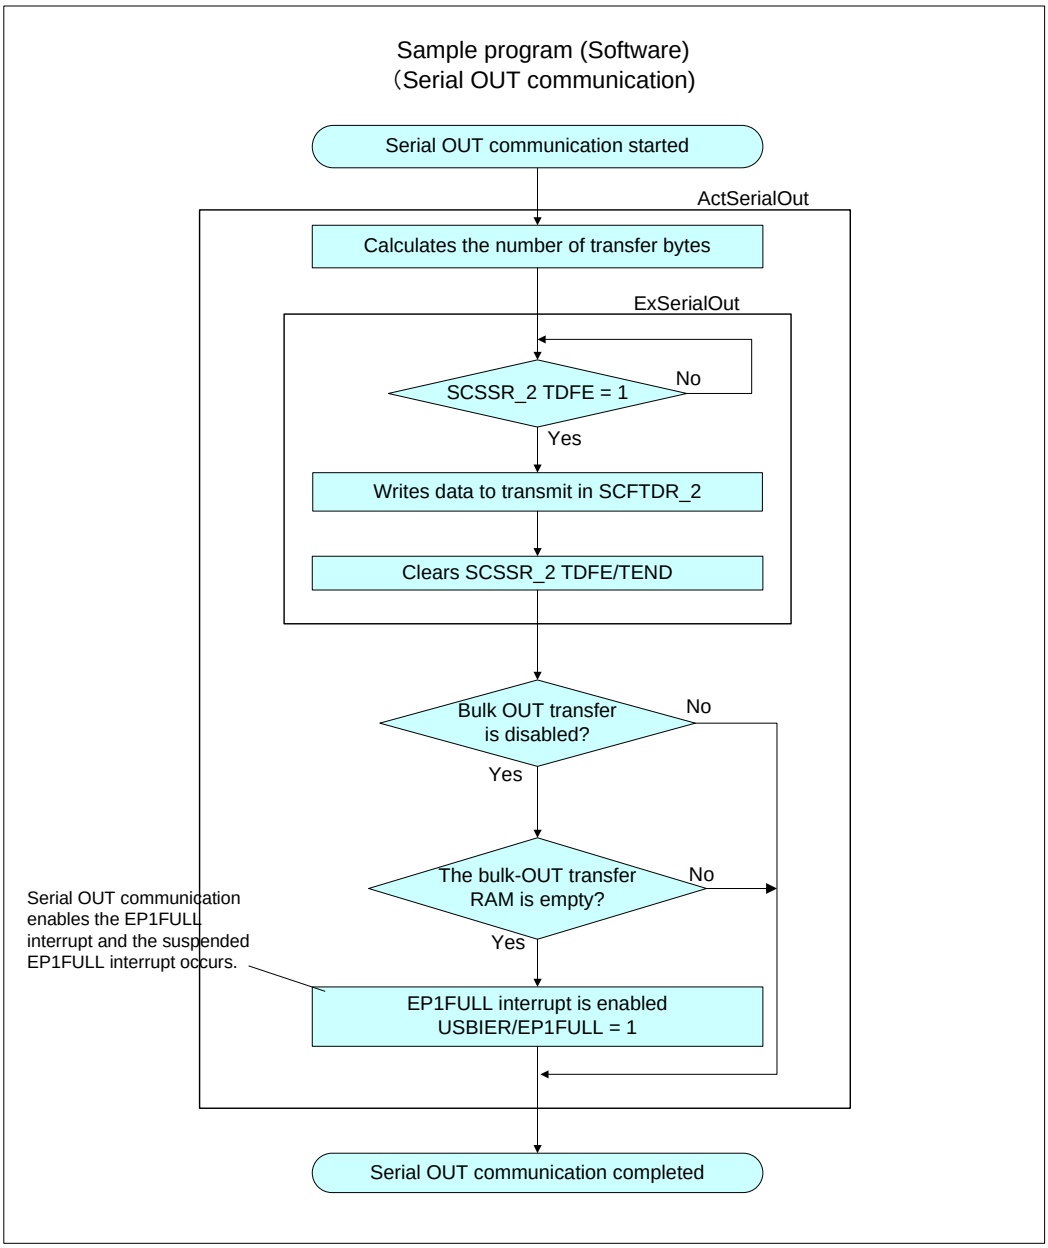

Figure 3.7 Serial OUT Communication

[1] This is for the M3A-HS85 with the SH7285 MCU. The SCI module is used on the M3A-HS87 with the SH7286 MCU.

3.3.2 Serial IN Communication

Serial IN communication is activated by the serial receive interrupt and executed by the ActSerialIn function. The sample program stores serially-received data in the RAM for the bulk IN transfer. When the RAM is full, the sample program transmits Xoff in serial communication to disable the serial IN communication. Figure 3.8 shows an operation flowchart of the Serial IN Communication.

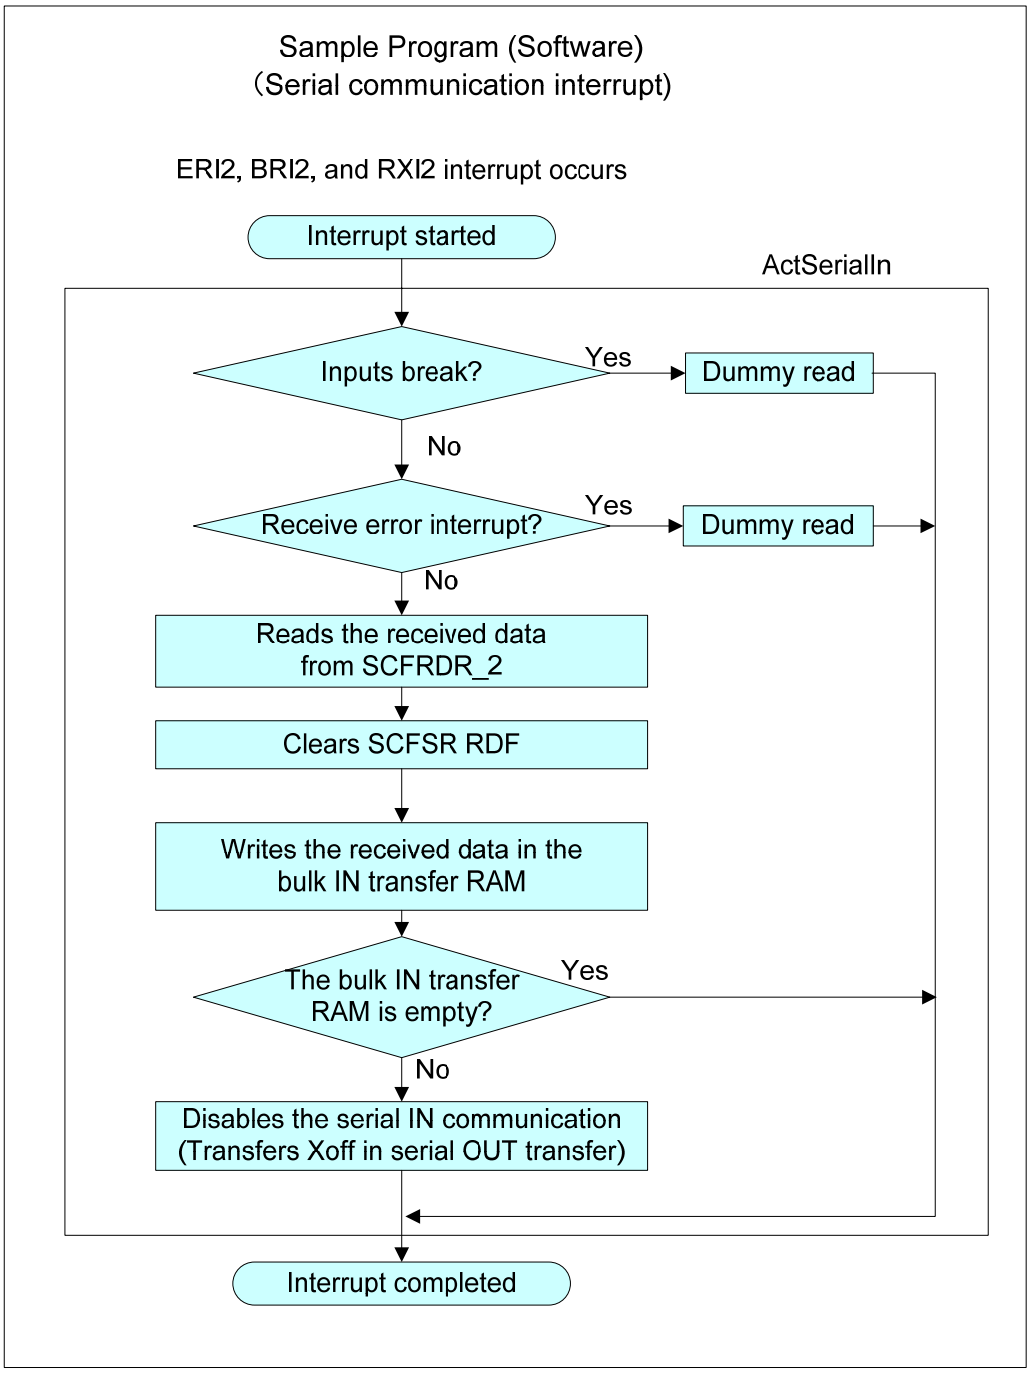

Figure 3.8 Serial IN Communication

3.4 Setting Environment

Use an RS-232C serial cable to connect the M3A-HS85 (SH7285 CPU board) to the computer (cross-connect). Then, use a USB cable to connect the M3A-HS19 to the computer. Figure 3.9 shows the Setting Environment.

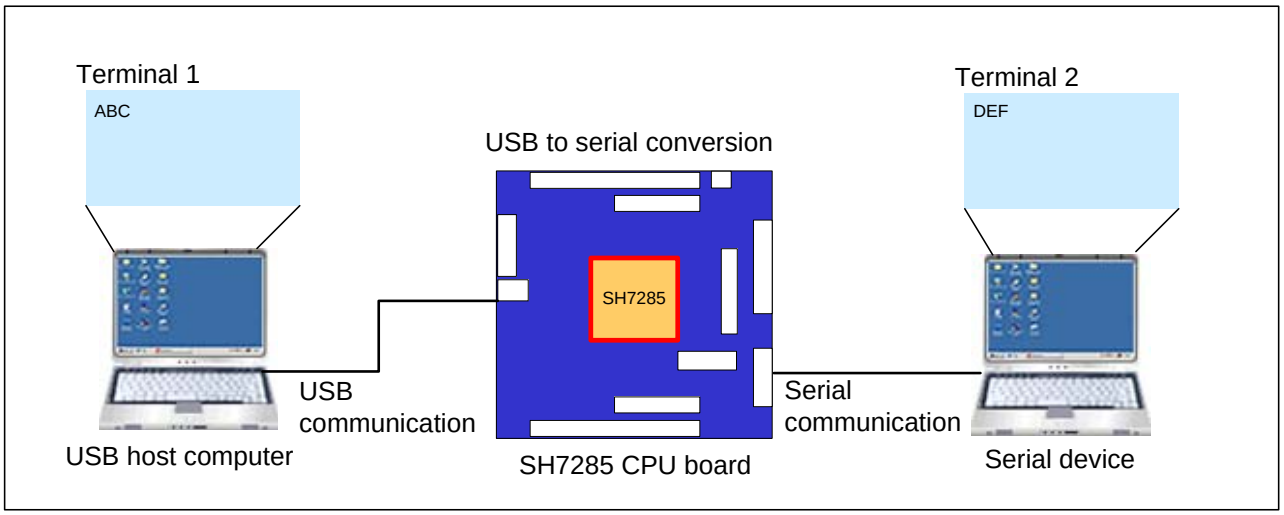

Figure 3.9 Setting Environment

3.4.1 USB Host Computer Setting

After the sample program is written to the M3A-HS85 and is connected to the USB host computer with a USB cable for the first time, the device driver needs to be installed on the USB host computer. Install the Windows standard USB communication class device driver (usbser.sys) as the device driver. Figure 3.10 through Figure 3.12 show the INF files for Windows. These files are used for installation.

```
;------------------------------------------------------------
;     Renesas Technology Corp
;     USB Serial Ports Driver
;      for Windows2000 and WindowsXP
;      29 September 2003
;------------------------------------------------------------

[Version]
LayoutFile=layout.inf
Signature="$CHICAGO$"
Class=Ports
ClassGuid={4D36E978-E325-11CE-BFC1-08002BE10318}
Provider=%MyCompany%
DriverVer=29/09/2003,1.0.0.0

[DestinationDirs]
DefaultDestDir=12

[Manufacturer]
%MyCompany%=Models

[ClassInstall]
AddReg=PortsClass.AddReg
```

Figure 3.10 INF File Example for Windows (1/3)

```
[PortsClass.AddReg]
HKR,,,,%PortsClassName%

[ClassInstall32.NT]
AddReg=PortsClass.NT.AddReg

[PortsClass.NT.AddReg]
HKR,,,,%PortsClassName%
HKR,,Icon,,"-23"
HKR,,Installer32,,"MsPorts.Dll,PortsClassInstaller"

[ControlFlags]
ExcludeFromSelect=*

;*****************************************
; Please change to your company's VID and PID *
;*****************************************
[Models]
%USB.PnP%=ComPort, USB¥VID_045B&PID_0020     /* USB Vendor ID & Product ID */

[ComPort.NT]
CopyFiles=ComPort.Copy
AddReg=ComPort.AddReg, ComPort.NT.AddReg

[ComPort.NT.HW]
AddReg=ComPort.NT.HW.AddReg

[ComPort.NT.Services]
AddService = usbser, 0x00000002, Serial_Service_Inst,
Serial_EventLog_Inst
AddService = Serenum,,Serenum_Service_Inst

[ComPort.NT.HW.AddReg]
HKR,,"UpperFilters",0x00010000,"serenum"

; -------------- USBSerial Port Driver install sections
[Serial_Service_Inst]
DisplayName    = %Serial.SVCDESC%
ServiceType   = 1             ; SERVICE_KERNEL_DRIVER
StartType     = 3             ; SERVICE_DEMAND_START
ErrorControl   = 1            ; SERVICE_ERROR_NORMAL
ServiceBinary  = %12%¥usbser.sys
LoadOrderGroup = Extended base

; -------------- Serenum Driver install section
[Serenum_Service_Inst]
DisplayName    = %Serenum.SVCDESC%
ServiceType   = 1             ; SERVICE_KERNEL_DRIVER
StartType     = 3             ; SERVICE_DEMAND_START
ErrorControl   = 1            ; SERVICE_ERROR_NORMAL
ServiceBinary  = %12%¥serenum.sys
LoadOrderGroup = PNP Filter

[Serial_EventLog_Inst]
AddReg = Serial_EventLog_AddReg
```

Figure 3.11 INF File Example for Windows (2/3)

```
[Serial_EventLog_AddReg]
HKR,,EventMessageFile,0x00020000,"%%SystemRoot%%¥System32¥IoLogMsg.dll;%
%SystemRoot%%¥System32¥drivers¥usbser.sys"
HKR,,TypesSupported,0x00010001,7

; COM sections
;-----------------------------------------------------------
[ComPort.Copy]
usbser.sys,,,0x20

[ComPort.AddReg]
HKR,,PortSubClass,1,01

[ComPort.NT.Copy]
CopyFiles=ComPort.Copy

[ComPort.NT.AddReg]
HKR,,EnumPropPages32,,"MsPorts.dll,SerialPortPropPageProvider"


;*****************************************
; Please change to your company's information *
;*****************************************
[Strings]
MyCompany="Renesas Technology Corp"
DiskName_Desc="Installation Disk"
PortsClassName = "Ports (COM & LPT)"
Serenum.SVCDESC = "Serenum Filter Driver"
Serial.SVCDESC = "USB Serial Ports Driver"
USB.PnP="USB Serial Ports Driver"
```

Figure 3.12 INF file example for Windows (3/3)

Note:

VID_045B and PID_0020 MUST be changed according to the Vendor ID and Product ID set in the device descriptor. Table 3.3 shows the default values.

Table 3.3 Vendor ID and Product ID

Value	Description
VID_045B	Indicates the Vendor ID = 0x045B.
PID_0020	Indicates the Product ID = 0x0020.

3.4.2 PC-PC Communication Settings

The table below lists the settings for the terminal software.

Table 3.4 Terminal Software Settings

Items	Description
Connection	Select the number of ports connected to an RS-232C serial cable or a USB cable
bps (B)	115200 bps
Data bits (D)	8
Parity (P)	None
Stop bit (S)	1
Flow control(F)	Xon/Xoff

4. References

Software Manual

SH-1/SH-2/SH-DSP Software Manual Rev. 7.00

Download the latest version from Renesas Technology website.

Website and Support

Renesas Technology Website
http://www.renesas.com/

Inquiries
http://renesas.com/inquiry
csc@renesas.com

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	2008.05.13	-	First edition issued

All trademarks and registered trademarks are the property of their respective owners.

Notes regarding these materials

1. This document is provided for reference purposes only so that Renesas customers may select the appropriate Renesas products for their use. Renesas neither makes warranties or representations with respect to the accuracy or completeness of the information contained in this document nor grants any license to any intellectual property rights or any other rights of Renesas or any third party with respect to the information in this document.
2. Renesas shall have no liability for damages or infringement of any intellectual property or other rights arising out of the use of any information in this document, including, but not limited to, product data, diagrams, charts, programs, algorithms, and application circuit examples.
3. You should not use the products or the technology described in this document for the purpose of military applications such as the development of weapons of mass destruction or for the purpose of any other military use. When exporting the products or technology described herein, you should follow the applicable export control laws and regulations, and procedures required by such laws and regulations.
4. All information included in this document such as product data, diagrams, charts, programs, algorithms, and application circuit examples, is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas products listed in this document, please confirm the latest product information with a Renesas sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas such as that disclosed through our website. (http://www.renesas.com)
5. Renesas has used reasonable care in compiling the information included in this document, but Renesas assumes no liability whatsoever for any damages incurred as a result of errors or omissions in the information included in this document.
6. When using or otherwise relying on the information in this document, you should evaluate the information in light of the total system before deciding about the applicability of such information to the intended application. Renesas makes no representations, warranties or guaranties regarding the suitability of its products for any particular application and specifically disclaims any liability arising out of the application and use of the information in this document or Renesas products.
7. With the exception of products specified by Renesas as suitable for automobile applications, Renesas products are not designed, manufactured or tested for applications or otherwise in systems the failure or malfunction of which may cause a direct threat to human life or create a risk of human injury or which require especially high quality and reliability such as safety systems, or equipment or systems for transportation and traffic, healthcare, combustion control, aerospace and aeronautics, nuclear power, or undersea communication transmission. If you are considering the use of our products for such purposes, please contact a Renesas sales office beforehand. Renesas shall have no liability for damages arising out of the uses set forth above.
8. Notwithstanding the preceding paragraph, you should not use Renesas products for the purposes listed below:
   (1) artificial life support devices or systems
   (2) surgical implantations
   (3) healthcare intervention (e.g., excision, administration of medication, etc.)
   (4) any other purposes that pose a direct threat to human life
   Renesas shall have no liability for damages arising out of the uses set forth in the above and purchasers who elect to use Renesas products in any of the foregoing applications shall indemnify and hold harmless Renesas Technology Corp., its affiliated companies and their officers, directors, and employees against any and all damages arising out of such applications.
9. You should use the products described herein within the range specified by Renesas, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas shall have no liability for malfunctions or damages arising out of the use of Renesas products beyond such specified ranges.
10. Although Renesas endeavors to improve the quality and reliability of its products, IC products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Please be sure to implement safety measures to guard against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other applicable measures. Among others, since the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
11. In case Renesas products listed in this document are detached from the products to which the Renesas products are attached or affixed, the risk of accident such as swallowing by infants and small children is very high. You should implement safety measures so that Renesas products may not be easily detached from your products. Renesas shall have no liability for damages arising out of such detachment.
12. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written approval from Renesas.
13. Please contact a Renesas sales office if you have any questions regarding the information contained in this document, Renesas semiconductor products, or if you have any other inquiries.

© 2008. Renesas Technology Corp., All rights reserved.